

SECTION BT

MODIFICATION NOTICE:

- The front grille has been changed.
- The rear bumper has been changed.
- Exterior has been added.
- The door mirror has been changed.

CONTENTS

BODY END .....	2	EXTERIOR .....	6
Body Front End.....	2	MIRROR .....	8
Body Rear End .....	5	Door Mirror.....	8

### Body Front End

- When removing or installing hood, place a cloth or other padding on hood. This prevents vehicle body from being scratched.
- Bumper fascia is made of plastic. Do not use excessive force and be sure to keep oil away from it.
- Hood adjustment: Adjust at hinge portion.
- Hood lock adjustment: After adjusting, check hood lock control operation. Apply a coat of grease to hood locks engaging mechanism.
- Hood opener: Do not attempt to bend cable forcibly. Doing so increases effort required to unlock hood.

#### REMOVAL — Front bumper assembly

- ① Remove clips securing front grille and remove the front grille. **A**
- ② Remove bolts securing left and right bumper stays. **B**
- ③ Remove bolts securing left and right bumper side brackets. **C**
- ④ Remove bolts securing left and right bumper side stays. **D**
- ⑤ Extract bumper assembly.

# BODY END


## Body Front End (Cont'd)

### Hood lock adjustment

- Adjust hood so that hood primary lock meshes at a position 1 to 1.5 mm (0.039 to 0.059 in) lower than fender.
- After hood lock adjustment, adjust bumper rubber.
- When securing hood lock, ensure it does not tilt. Striker must be positioned at the center of hood primary lock.
- After adjustment, ensure that hood primary and secondary lock operate properly.

### Hood lock secondary latch hooking length


More than 5.0 mm (0.197 in)

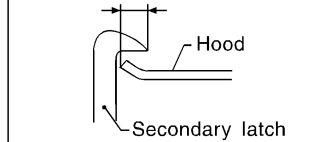

### Bumper rubber adjustment

- Adjust so that hood is aligned with fender. At that time deflection is approx. 2 mm (0.08 in).

[Bumper rubber free height is approx. 13 mm (0.51 in).]




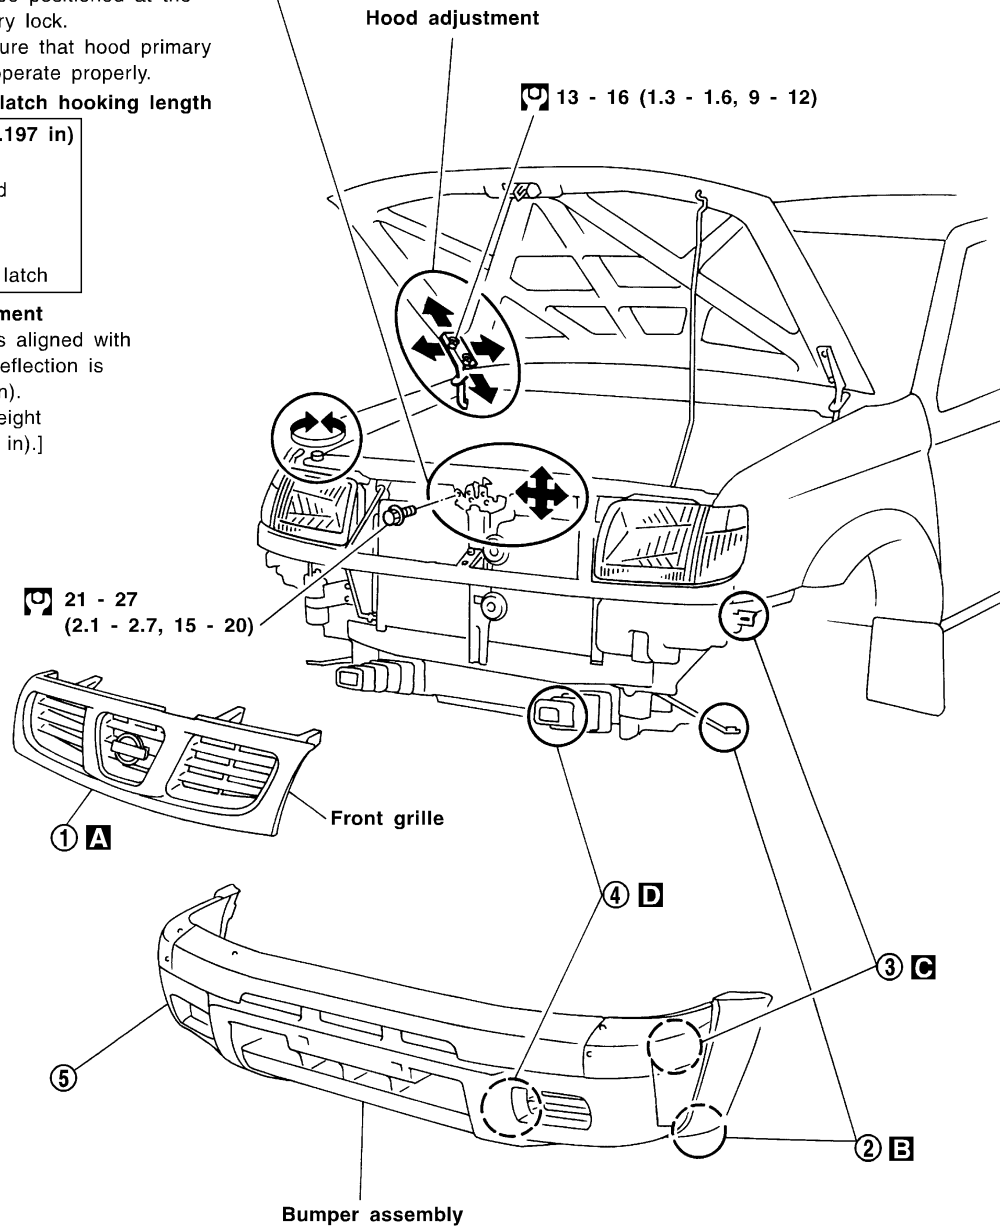



: N·m (kg-m, ft-lb)

GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
TF  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX

## BODY END

### Body Front End (Cont'd)

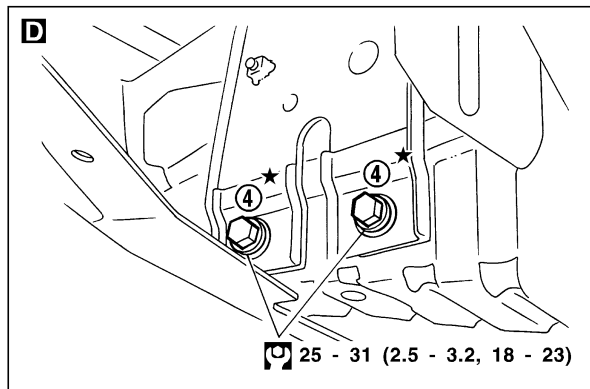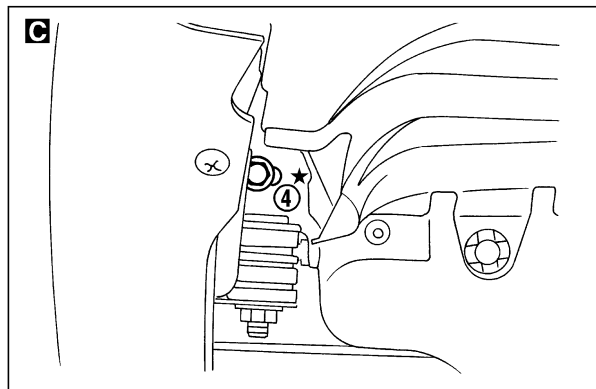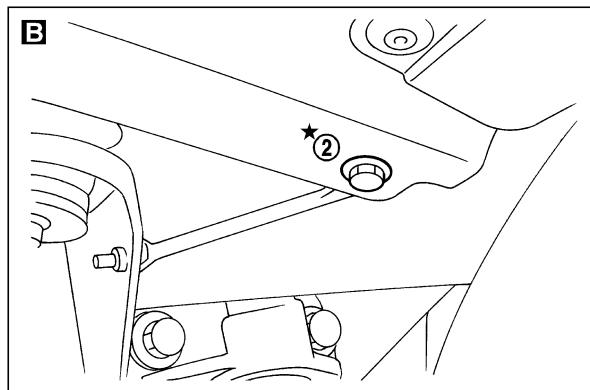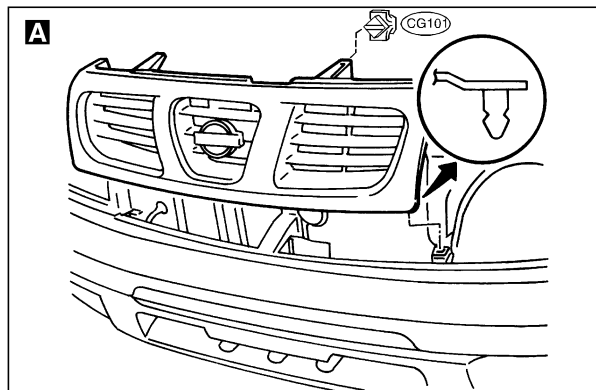

 : N•m (kg-m, ft-lb)


★ : Bumper assembly mounting bolts

## Body Rear End

### REMOVAL — Rear bumper assembly

- ① Remove bolts securing bumper side stay. **A**
- ② Extract bumper assembly.


SEC. 850

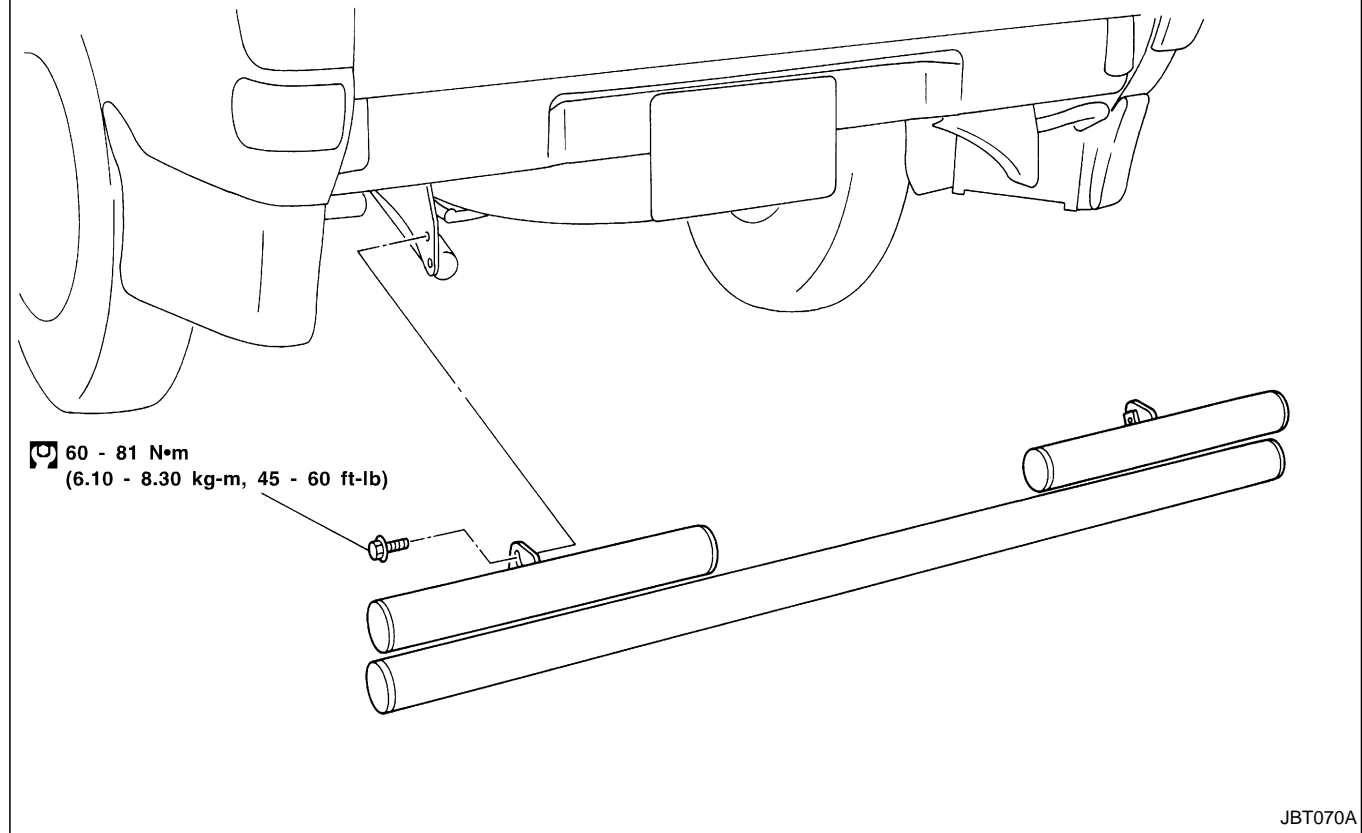


GI  
MA  
EM  
LC  
EC  
FE  
CL  
MT  
AT  
TF  
PD  
FA  
RA  
BR  
ST  
RS  
BT  
HA  
EL  
IDX




Rear mudguard

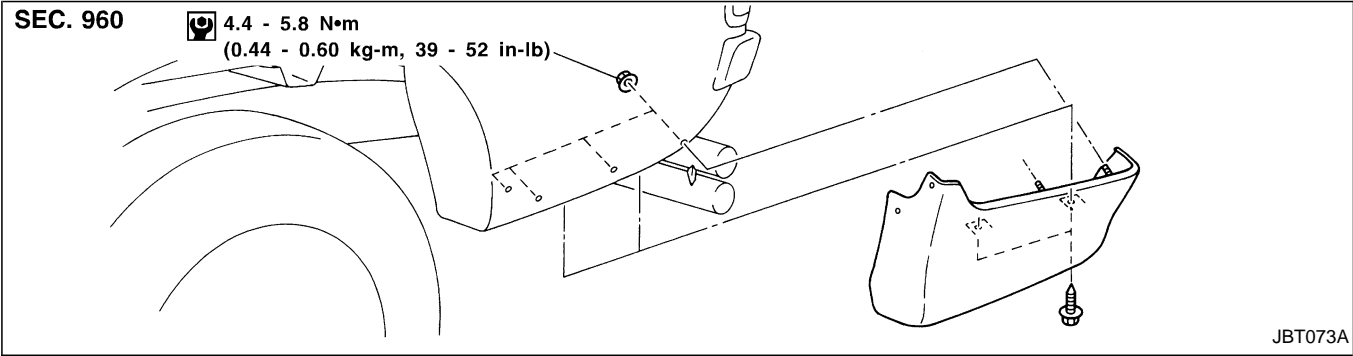

Hood ornament

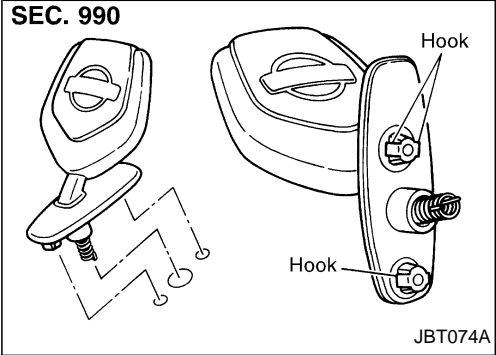

Corner cover

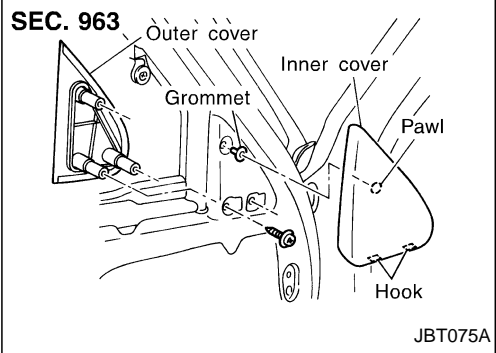

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX


# MIRROR

## Door Mirror

### REMOVAL — Door mirror

- ① Remove cover from the door.
- ② Remove bolts securing door mirror, then remove door mirror assembly.

SEC. 963

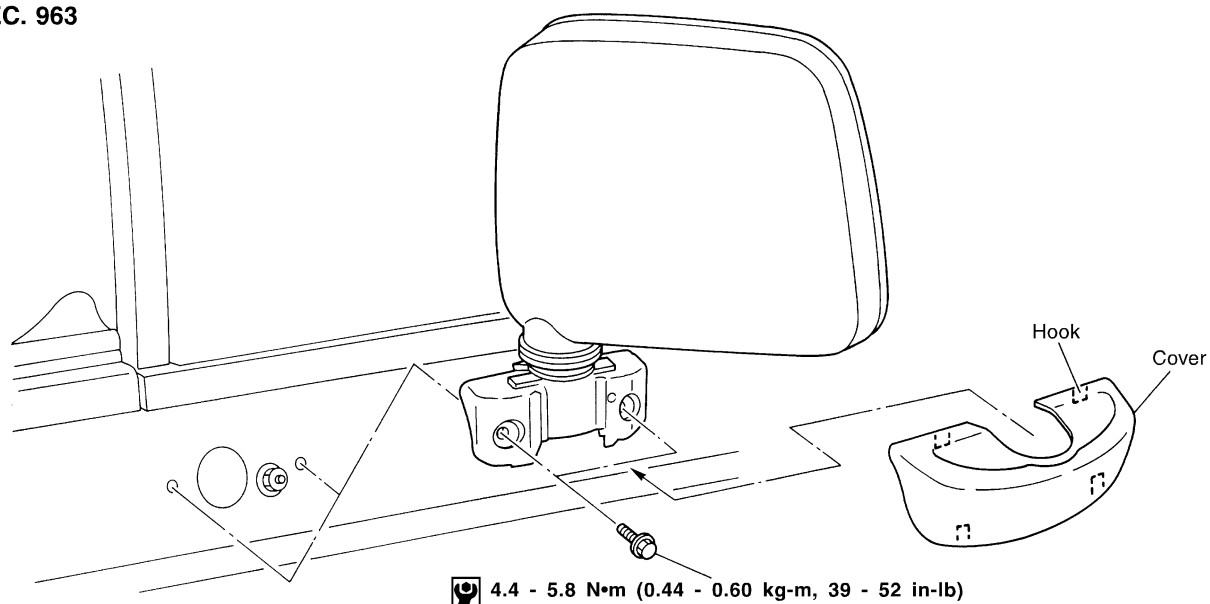

JBT076A