

SECTION BT

CONTENTS


BODY END	2	Stylish Guard Bar	4
Body Rear End	2	Side Step	5
EXTERIOR	3	INTERIOR TRIM	6
Roof Rail	3	Door Trim	6

Body Rear End

REMOVAL — Rear bumper assembly

- ① Remove bolts securing bumper side stay.
- ② Extract bumper assembly.

SEC. 850

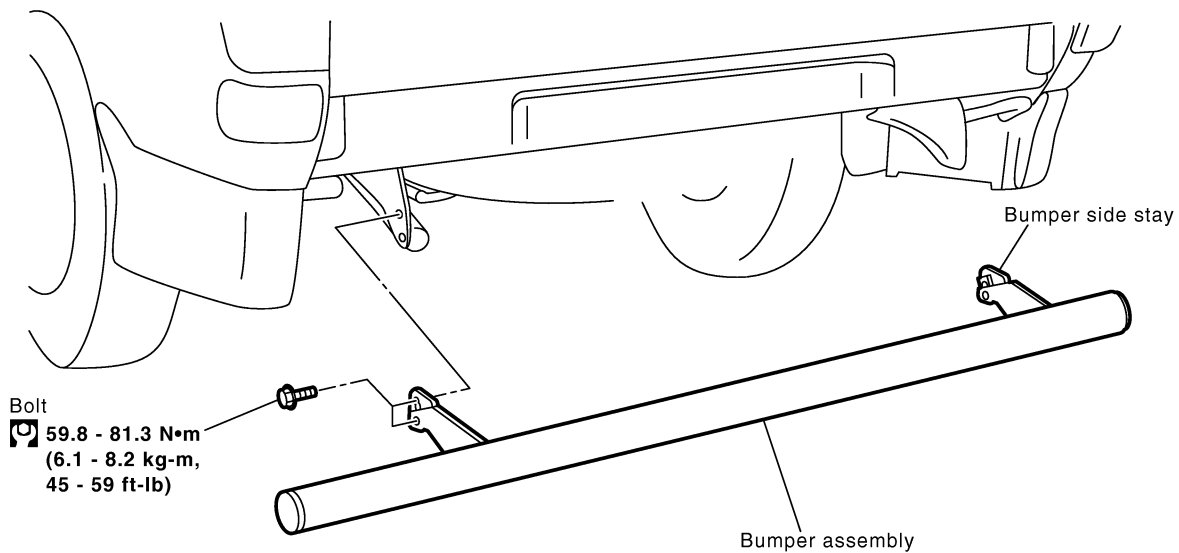


PIIA7294E

Roof Rail

REMOVAL — Roof rail assembly


- ① Remove nuts of roof rail (front).
- ② Remove nuts of roof rail (rear).
- ③ Remove roof rail assembly.

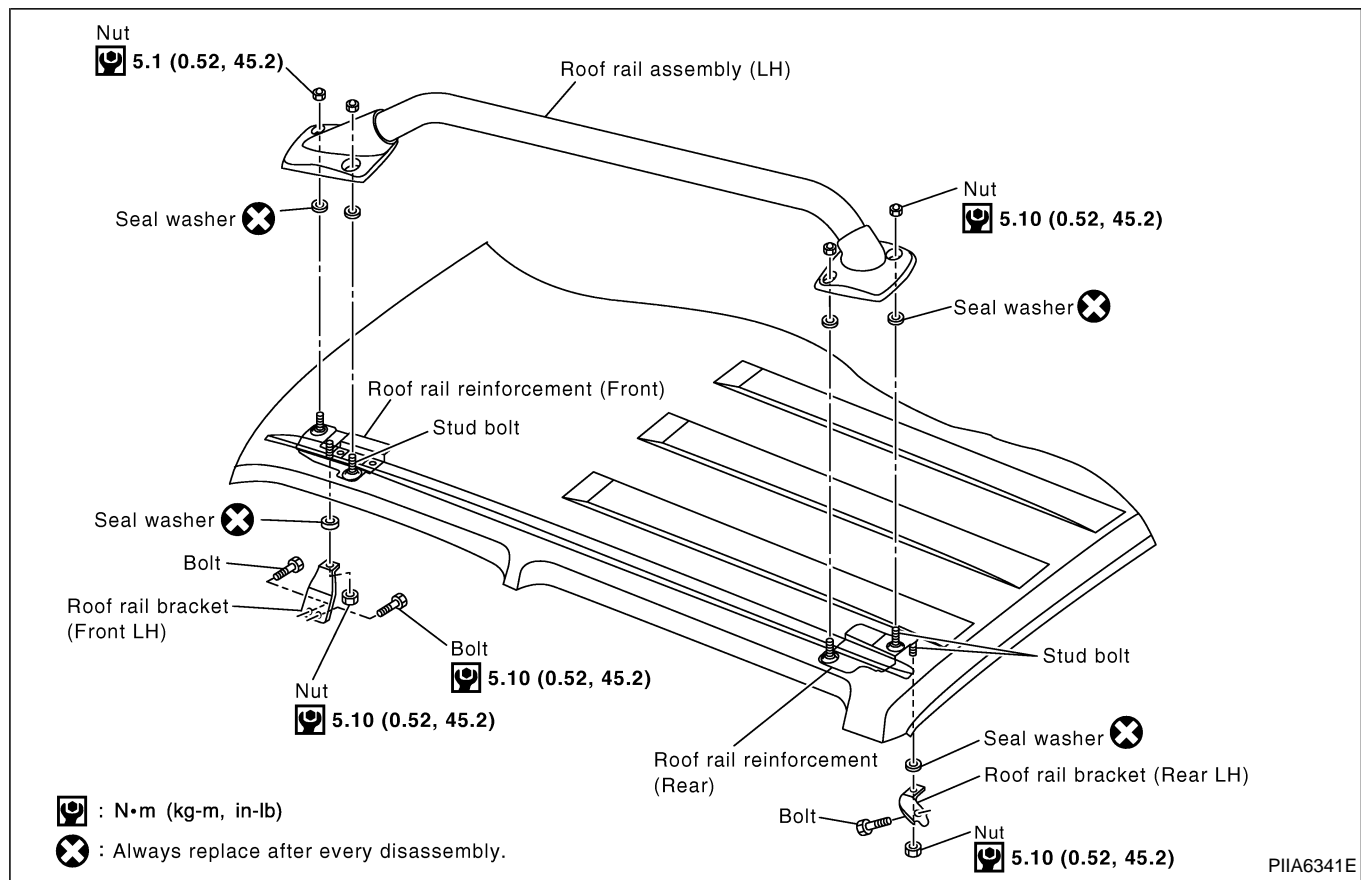

Stylish Guard Bar

REMOVAL — Stylish guard bar assembly


- ① Remove nuts of guard bar (left).
- ② Remove nuts of guard bar (right).
- ③ Remove bolt of guard bar (right).
- ④ Remove stylish guard bar assembly.

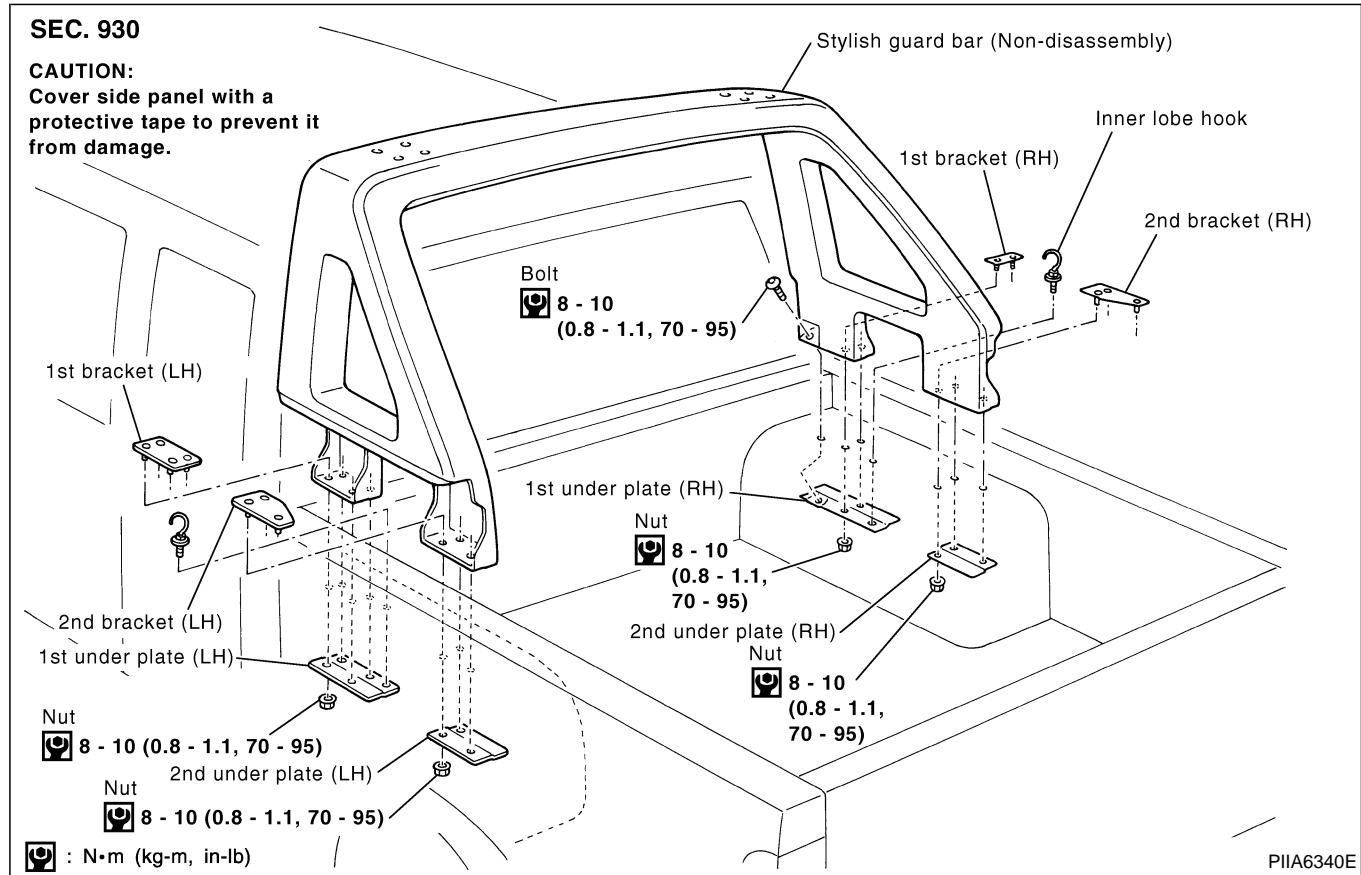

Side Step

REMOVAL — Side step assembly

- ① Remove front kicking plate (left/right).
- ② Remove rear kicking plate (left/right).
- ③ Remove dash side finisher (left/right).
- ④ Remove front seat (left/right).
- ⑤ Disconnect front seat belt harness connector (right).
- ⑥ Remove bolts of side step (front).
- ⑦ Remove bolts of side step (rear).
- ⑧ Remove bolts of side step (center).
- ⑨ Remove side step assembly.

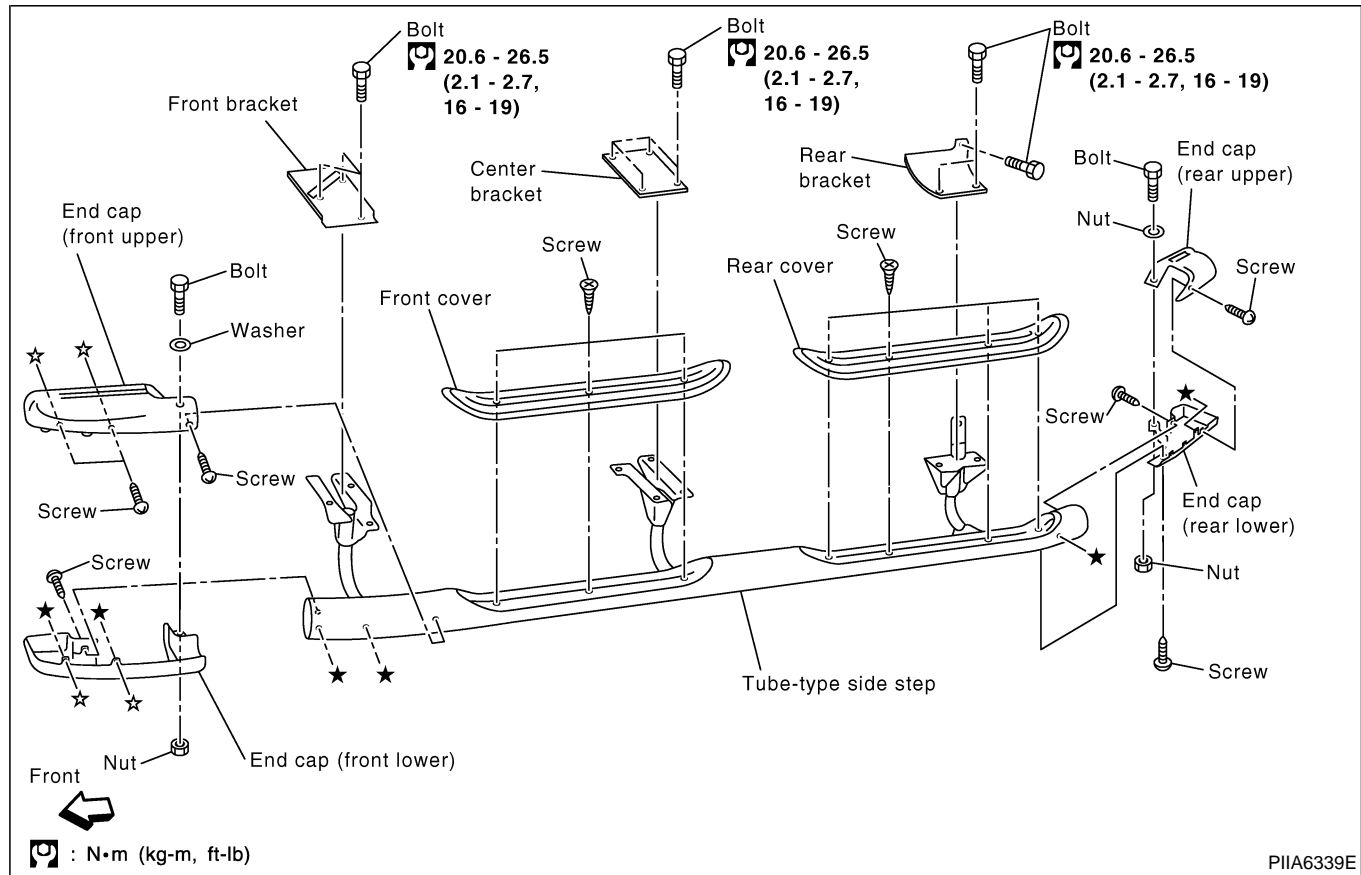

Door Trim

REMOVAL — Door trim


Front door trim

- ① Remove inside handle escutcheon. **A**
- ② Remove power window switch, then disconnect the connector. **B**
- ③ Remove door armrest. **C**
- ④ Remove screw securing pull handle and remove pull handle.
- ⑤ Remove bolt, screw and clip securing door finisher.
- ⑥ Lift out door finisher.

Rear door trim

- ⑦ Remove inside handle escutcheon. **A**
- ⑧ Remove screws securing door handle and remove door handle.
- ⑨ Lift out door finisher, then disconnect power window switch connector.

INTERIOR TRIM Door Trim (Cont'd)

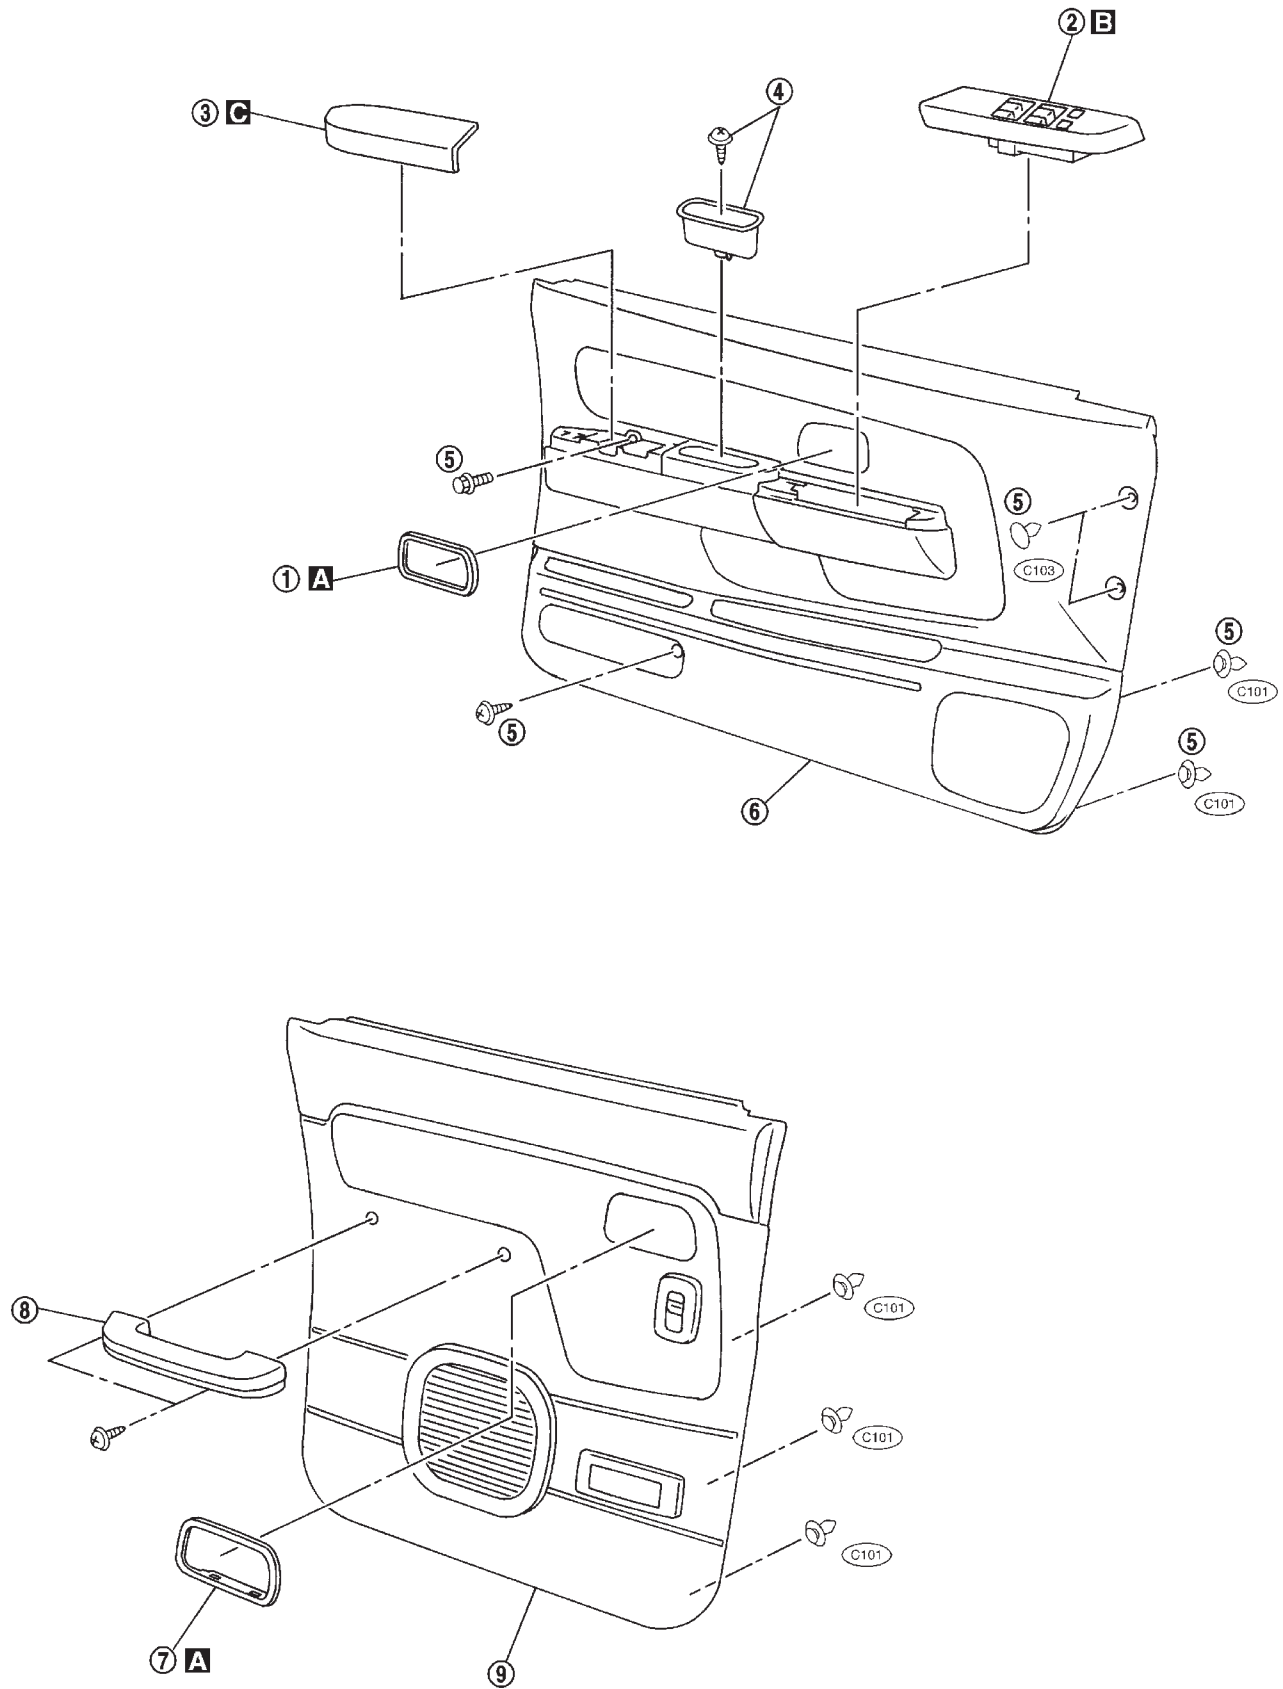

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

INTERIOR TRIM

Door Trim (Cont'd)

