

RESTRAINT SYSTEM

SECTION RS

MODIFICATION NOTICE:

Air bag system wiring diagram has been changed.


CONTENTS

TROUBLE DIAGNOSES - Supplemental Restraint System (SRS).....	2
Wiring Diagram - SRS -.....	2

- GI
- MA
- EM
- LC
- EC
- FE
- CL
- MT
- AT
- TF
- PD
- FA
- RA
- BR
- ST
- RS**
- BT
- HA
- EL
- IDX

Wiring Diagram — SRS —

RS-SRS-01

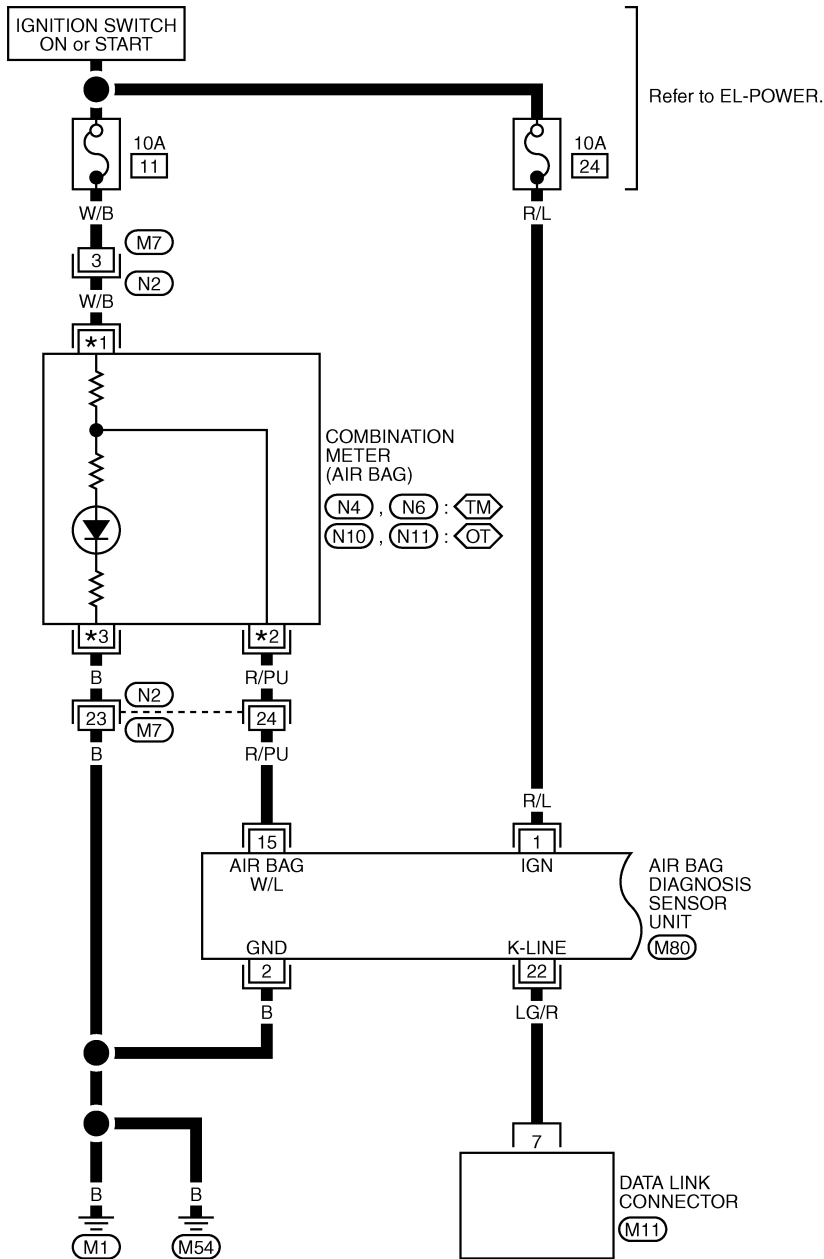


TM : With tachometer
OT : Without tachometer

- *1 17: TM
22: OT
- *2 45: TM
48: OT
- *3 24: TM
23: OT


COMBINATION
METER
(AIR BAG)
N4, N6 : TM
N10, N11 : OT

AIR BAG
DIAGNOSIS
SENSOR
UNIT
(M80)


DATA LINK
CONNECTOR
(M11)




(M11)
W




(M80)
Y




(N2)
W




(N4)
W



(N6)
BR



(N10)
BR









(N11)
W

DA : With dual air bag

PT : With seat belt pre-tensioner

AP : With seat belt pre-tensioner (Driver and passenger side)

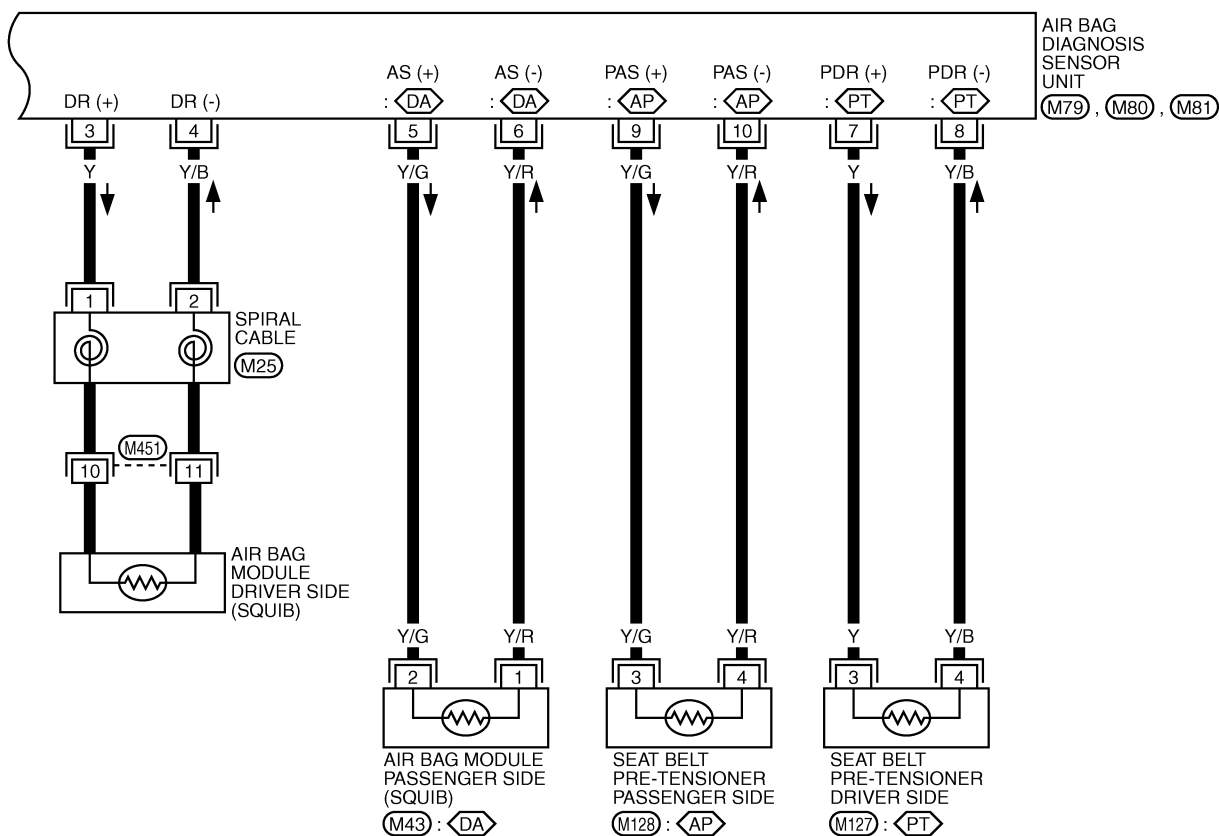

★: This connector is not shown in "HARNESS LAYOUT", EL section.