

SECTION **BR**

MODIFICATION NOTICE:


- Wiring Diagrams have been changed.
- Tightening torque of front brake caliper mounting bolt has been changed. (CL28VD)

CONTENTS

FRONT DISC BRAKE	2	Wiring Diagram - ABS -/4 Wheel Sensors LHD	
TROUBLE DIAGNOSES	3	Models	6
Wiring Diagram - ABS -/3 Wheel Sensors LHD		Wiring Diagram - ABS -/4 Wheel Sensors RHD	
Models	3	Models	9


FRONT DISC BRAKE

CL28VD

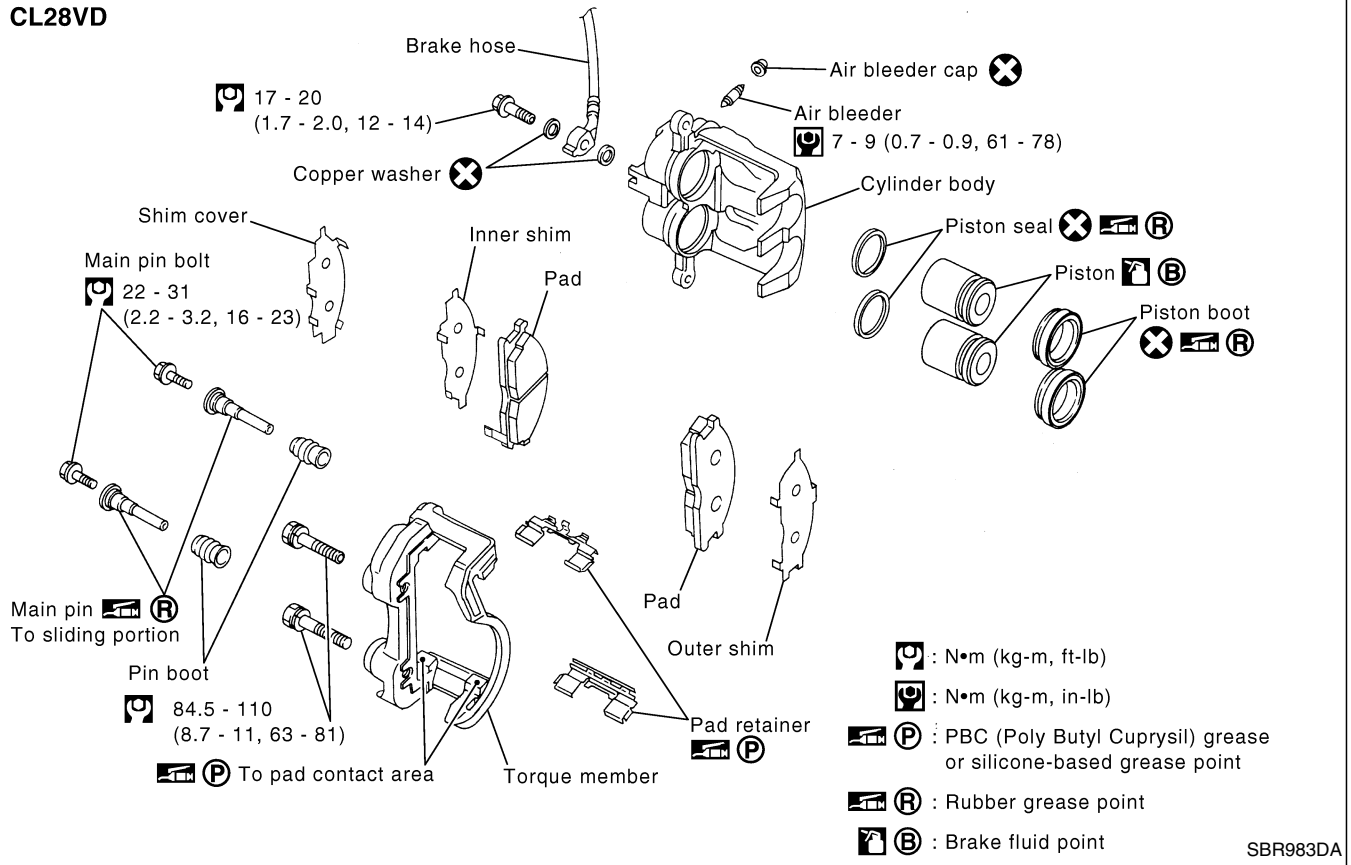

Wiring Diagram — ABS —/3 Wheel Sensors LHD Models

BR-ABS-01

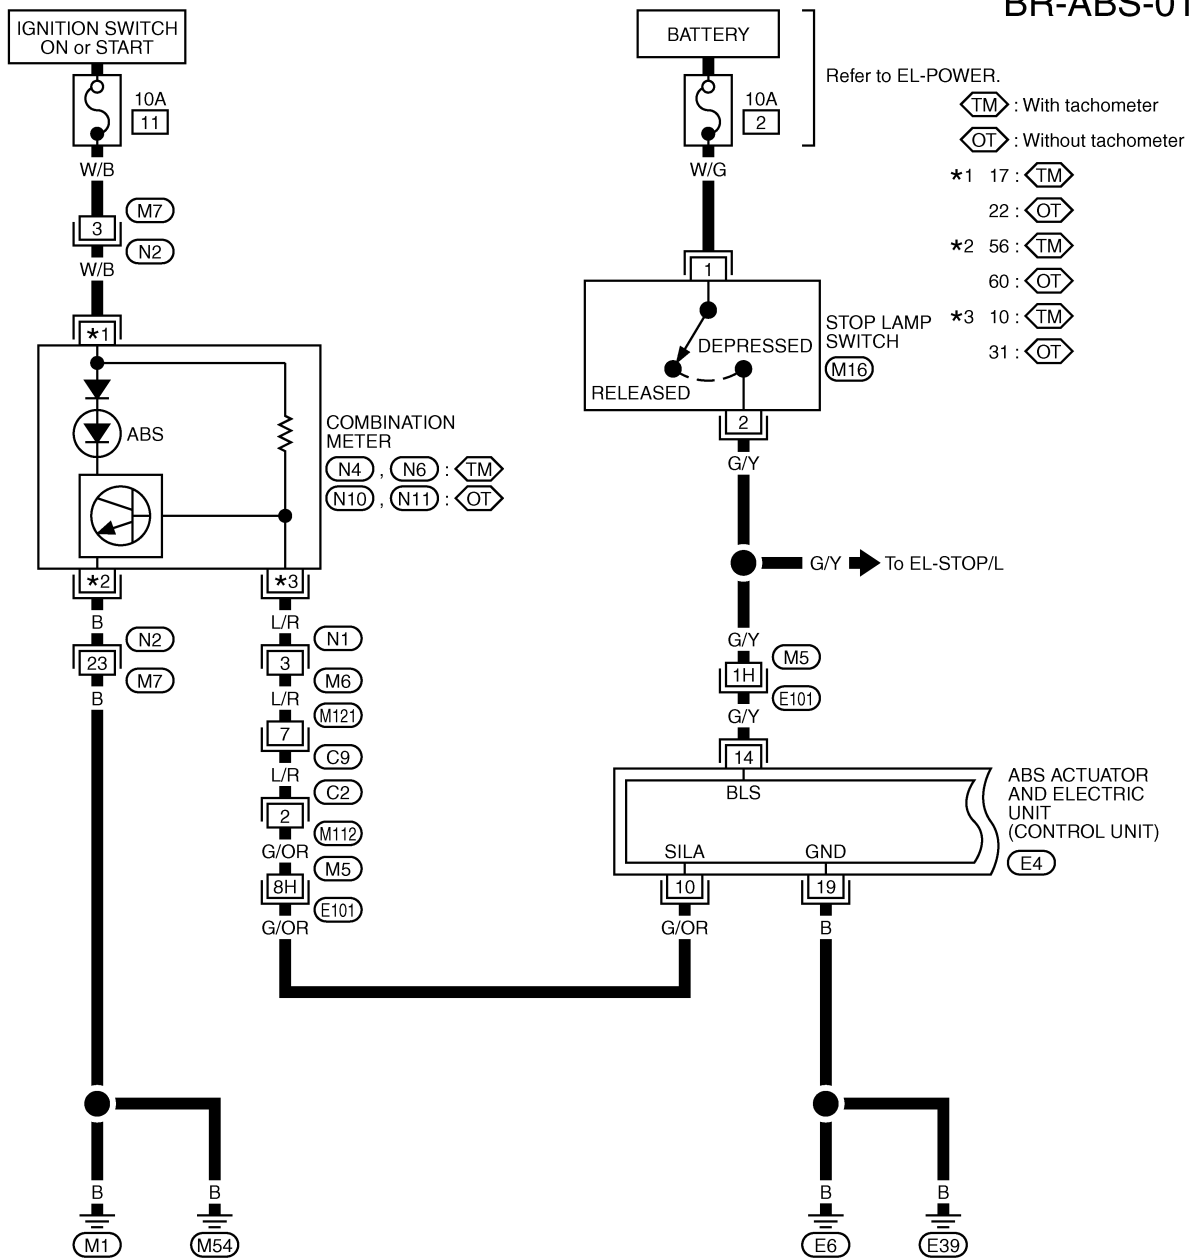

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX

TROUBLE DIAGNOSES

Wiring Diagram — ABS —/3 Wheel Sensors LHD Models (Cont'd)

BR-ABS-03

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST


RS

BT

HA


EL

IDX

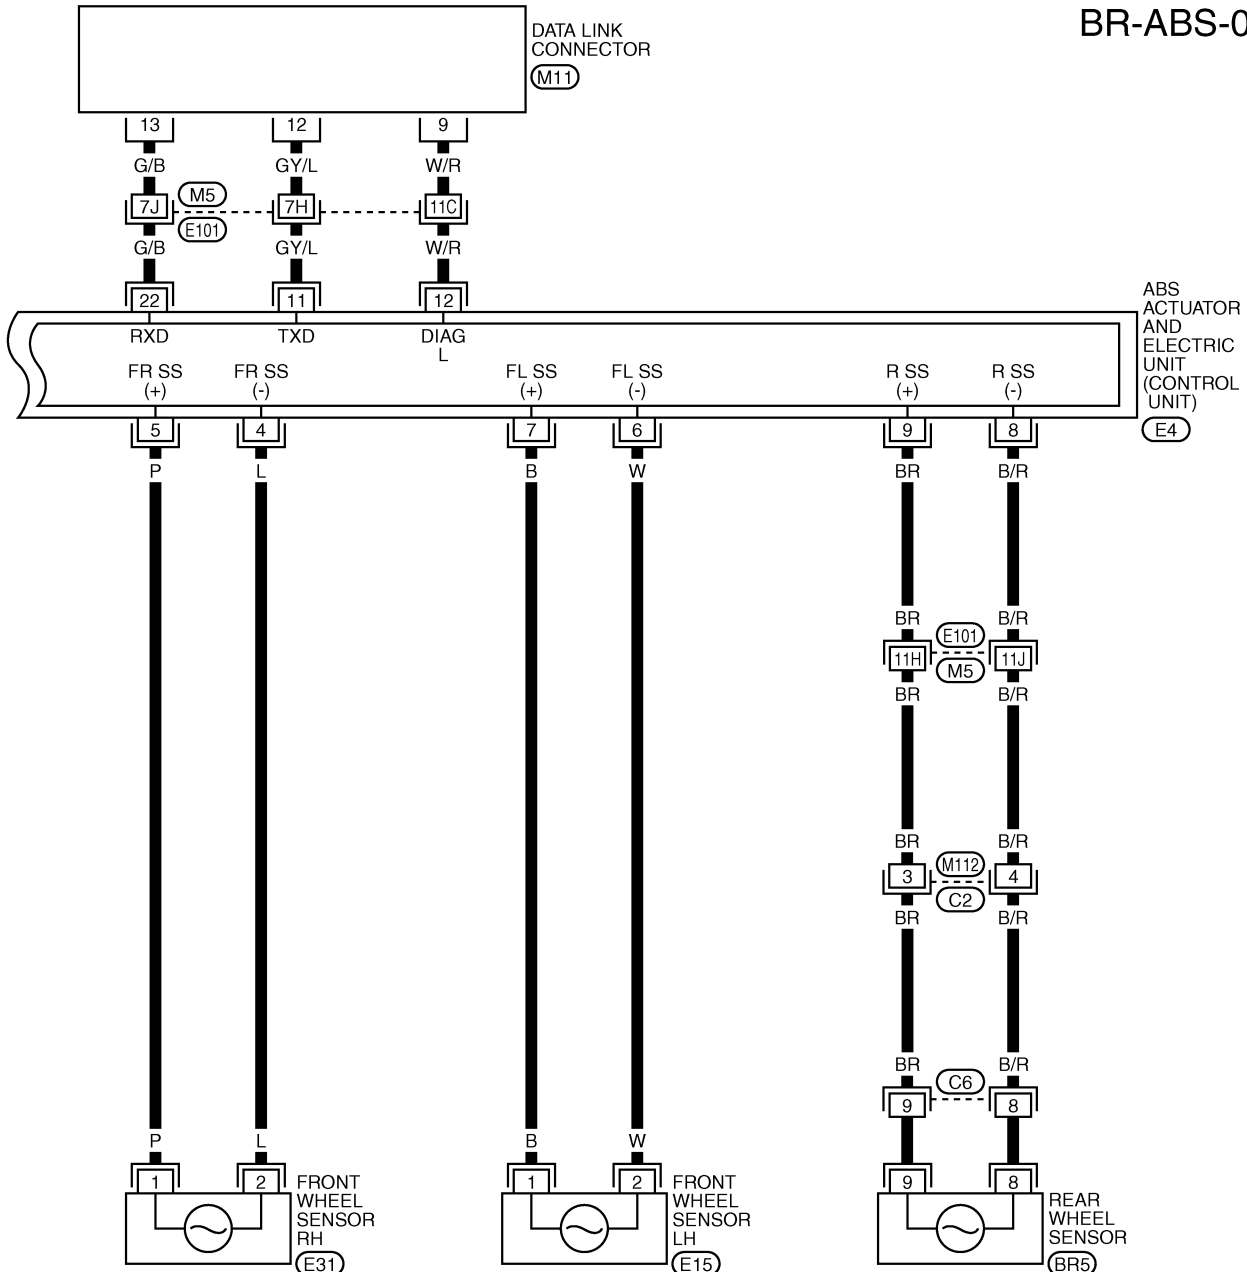


Refer to last page (Foldout page).



(M5), (E101)




(M11)
W

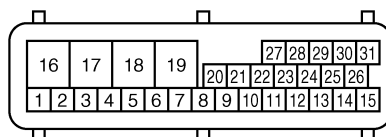

(E4)
B





(C2)
W



★: This connector is not shown in "HARNESS LAYOUT", EL section.

Wiring Diagram — ABS —/4 Wheel Sensors LHD Models

BR-ABS-04

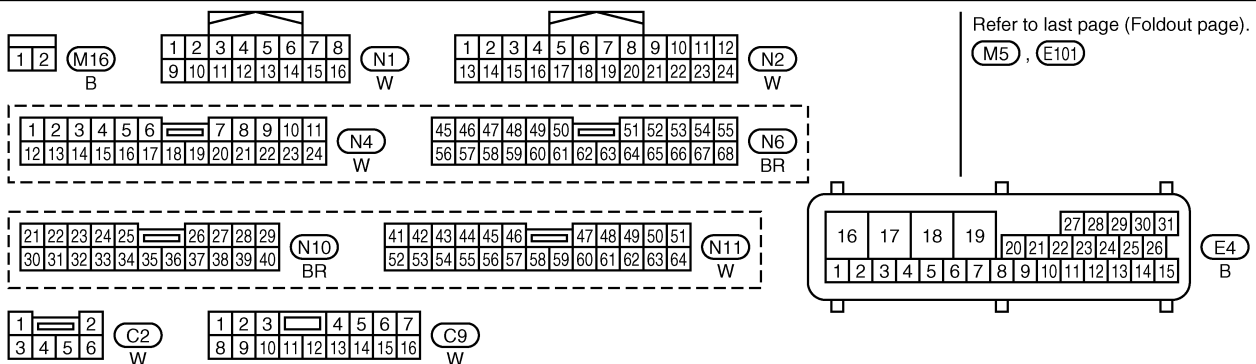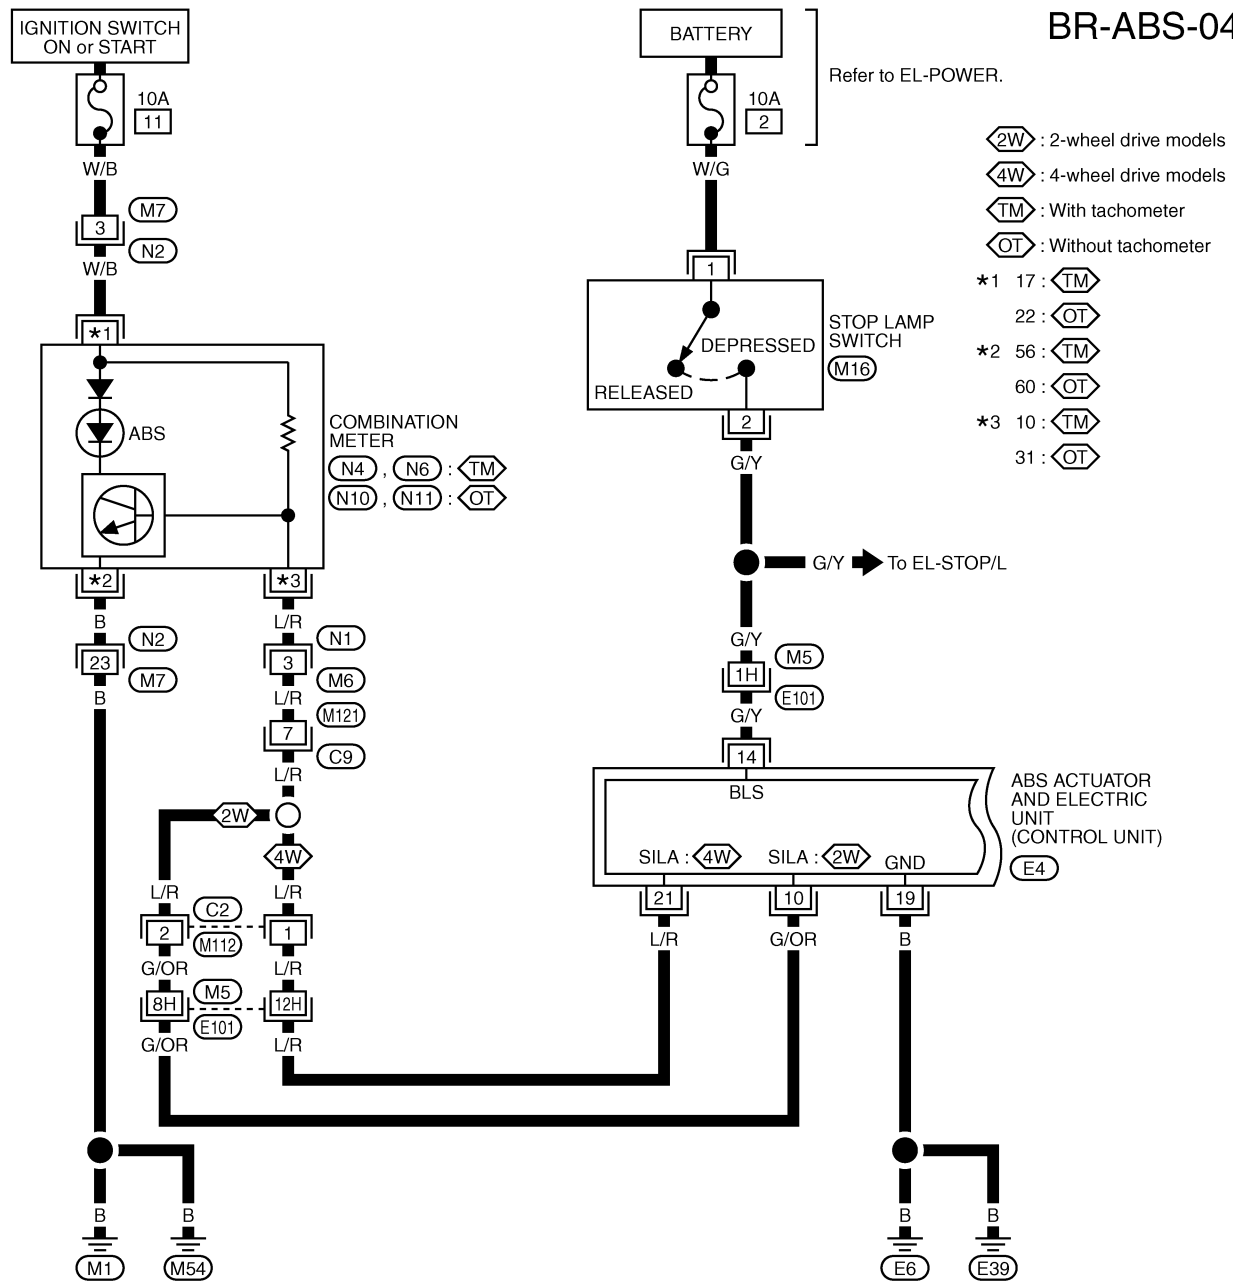

TROUBLE DIAGNOSES



Wiring Diagram — ABS —/4 Wheel Sensors LHD Models (Cont'd)

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
FA
RA
BR
ST
RS
BT
HA
EL
IDX

BR-ABS-05

Refer to EL-POWER.

4W : 4-wheel drive models

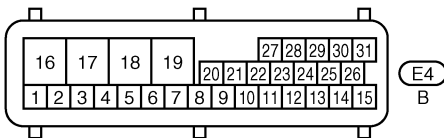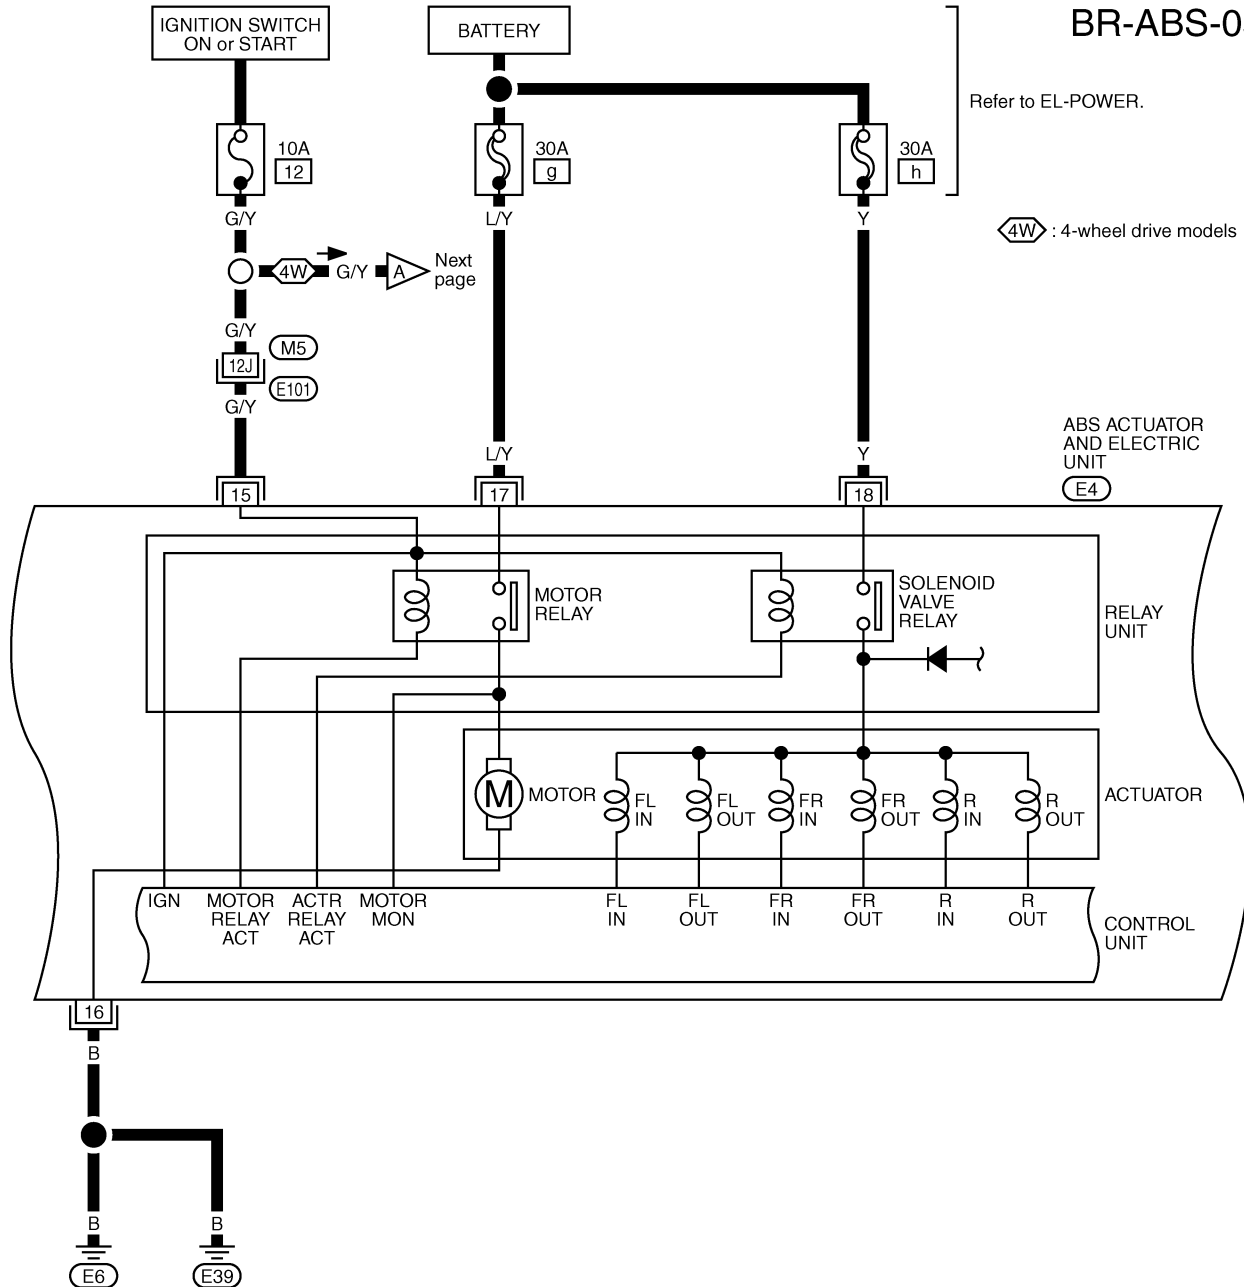

Refer to last page (Foldout page).



(M5), (E101)

TROUBLE DIAGNOSES


Wiring Diagram — ABS —/4 Wheel Sensors LHD Models (Cont'd)

BR-ABS-06


4W : 4-wheel drive models

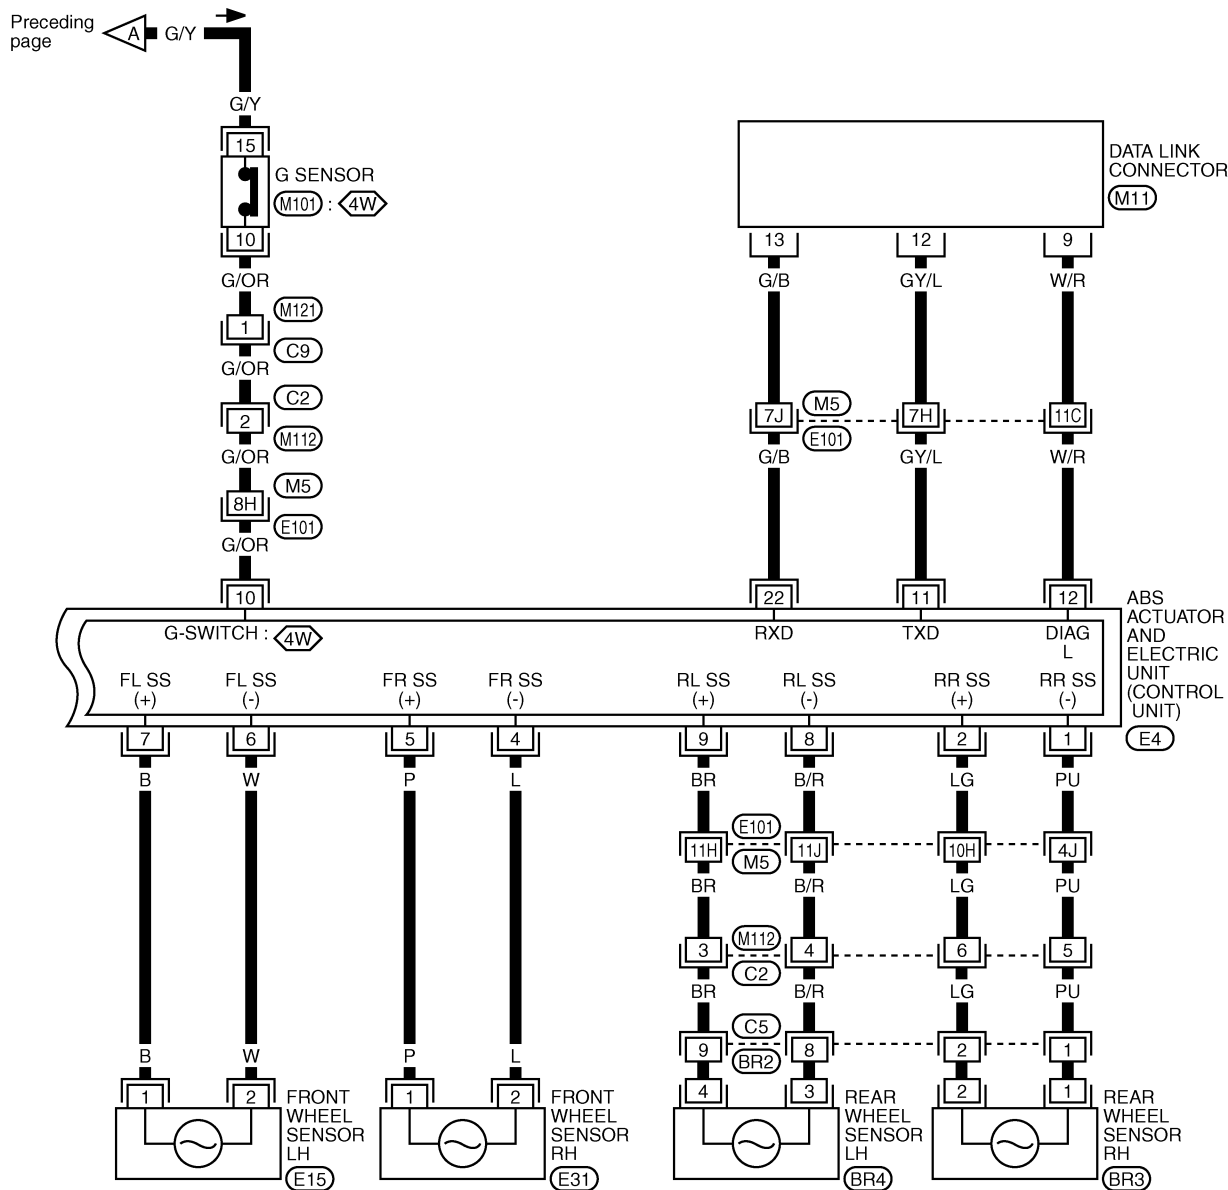

(M11)
W




(M101)
GY

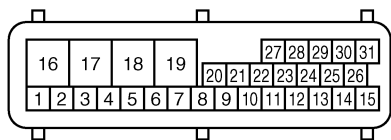


(E4)
B




(E15), (E31)
BR, GY



(C2)
W



(C5)
SB



(C9)
W



(BR3)
GY



(BR4)
BR

★: This connector is not shown in "HARNESS LAYOUT", EL section.

Refer to last page (Foldout page).

(M5), (E101)

Wiring Diagram — ABS —/4 Wheel Sensors RHD Models

BR-ABS-07

Refer to EL-POWER.

◻2W : 2-wheel drive models

◻4W : 4-wheel drive models

◻TM : With tachometer

◻OT : Without tachometer

*1 17: ◻TM



22: ◻OT

*2 56: ◻TM

60: ◻OT

*3 10: ◻TM



31: ◻OT

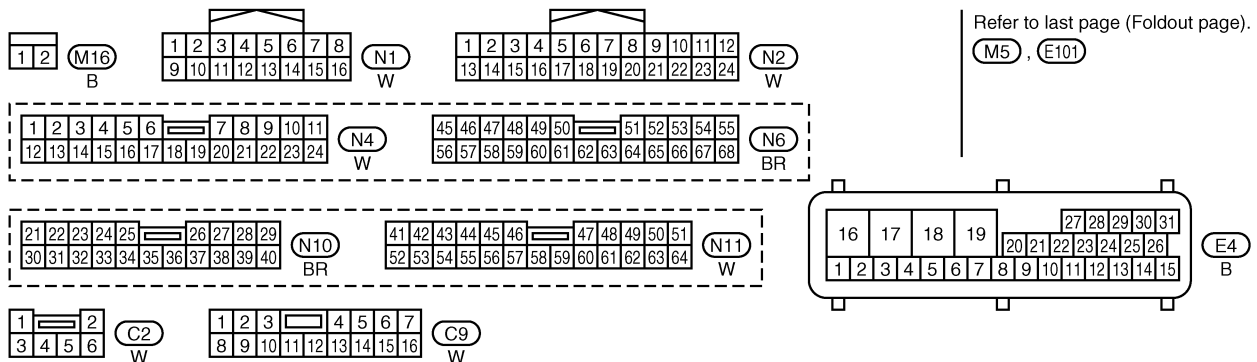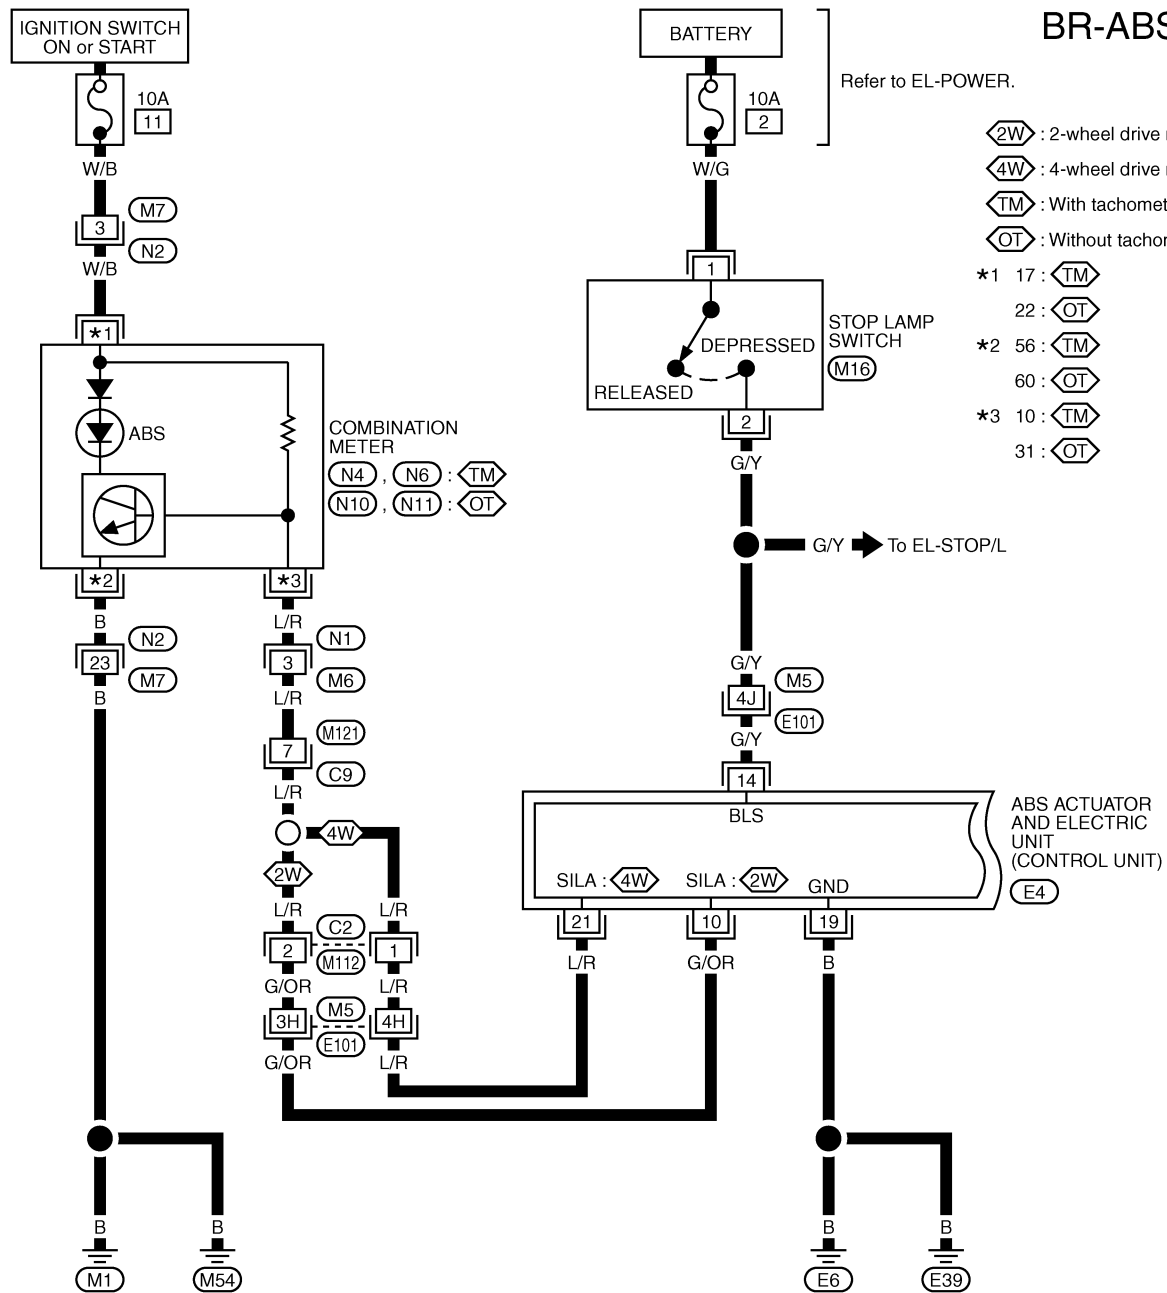

TROUBLE DIAGNOSES

Wiring Diagram — ABS —/4 Wheel Sensors RHD Models (Cont'd)

BR-ABS-08

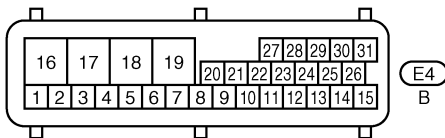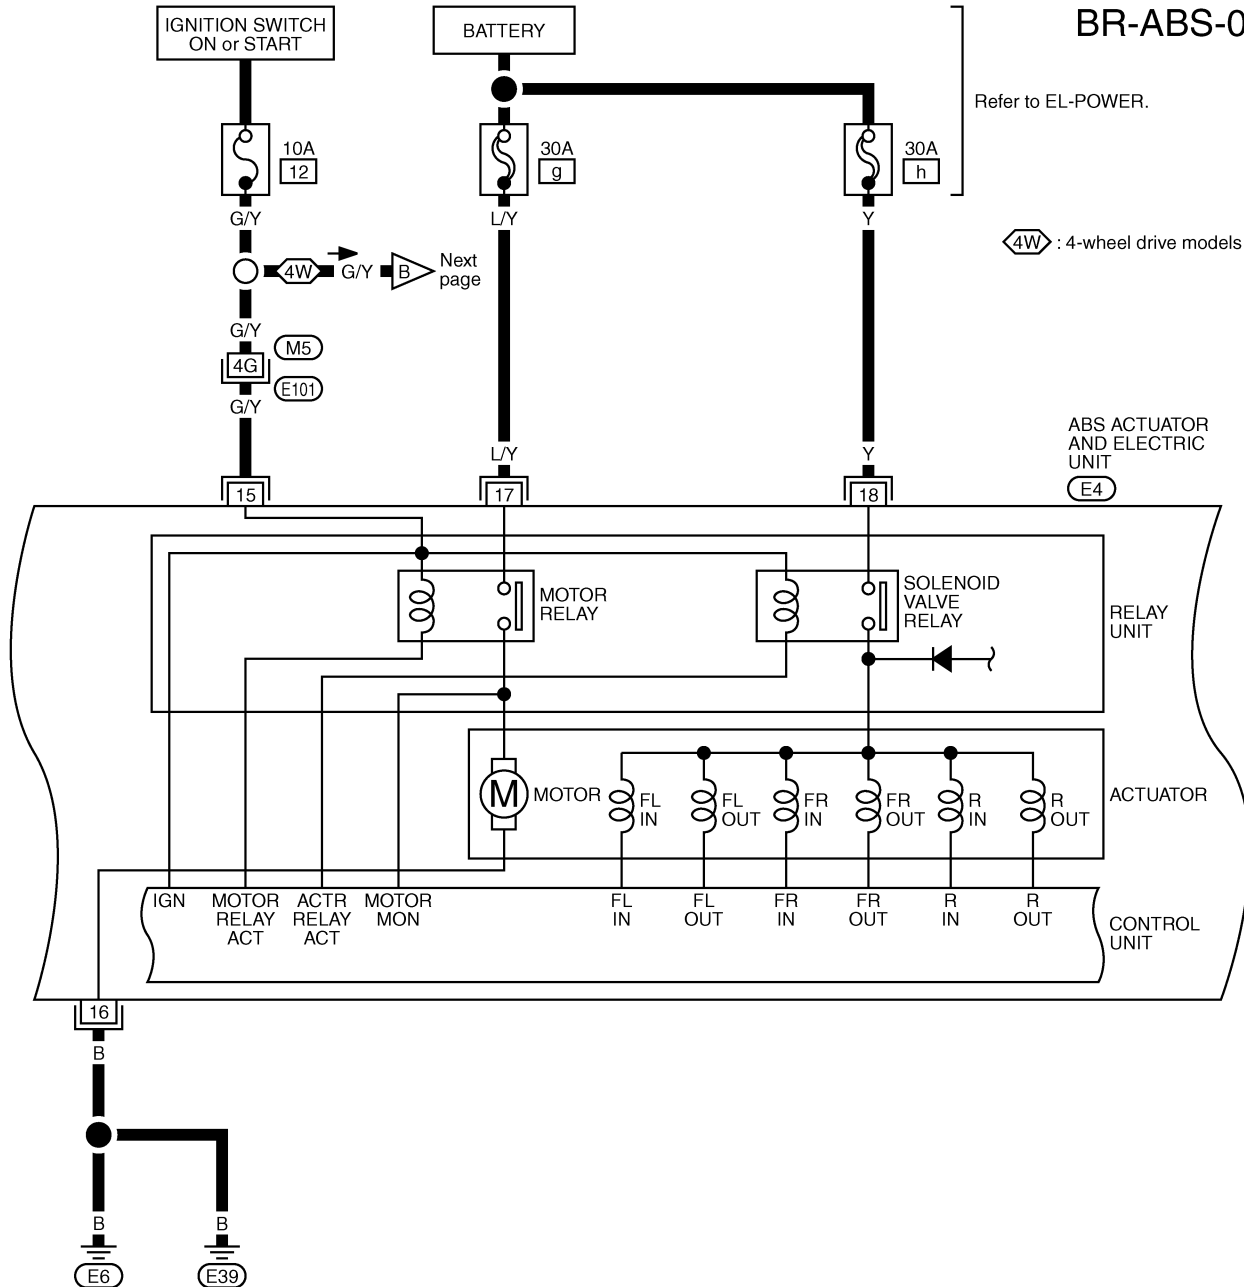

Refer to last page (Foldout page).




(M5), (E101)

TROUBLE DIAGNOSES

Wiring Diagram — ABS —/4 Wheel Sensors RHD Models (Cont'd)







BR-ABS-09

4W : 4-wheel drive models

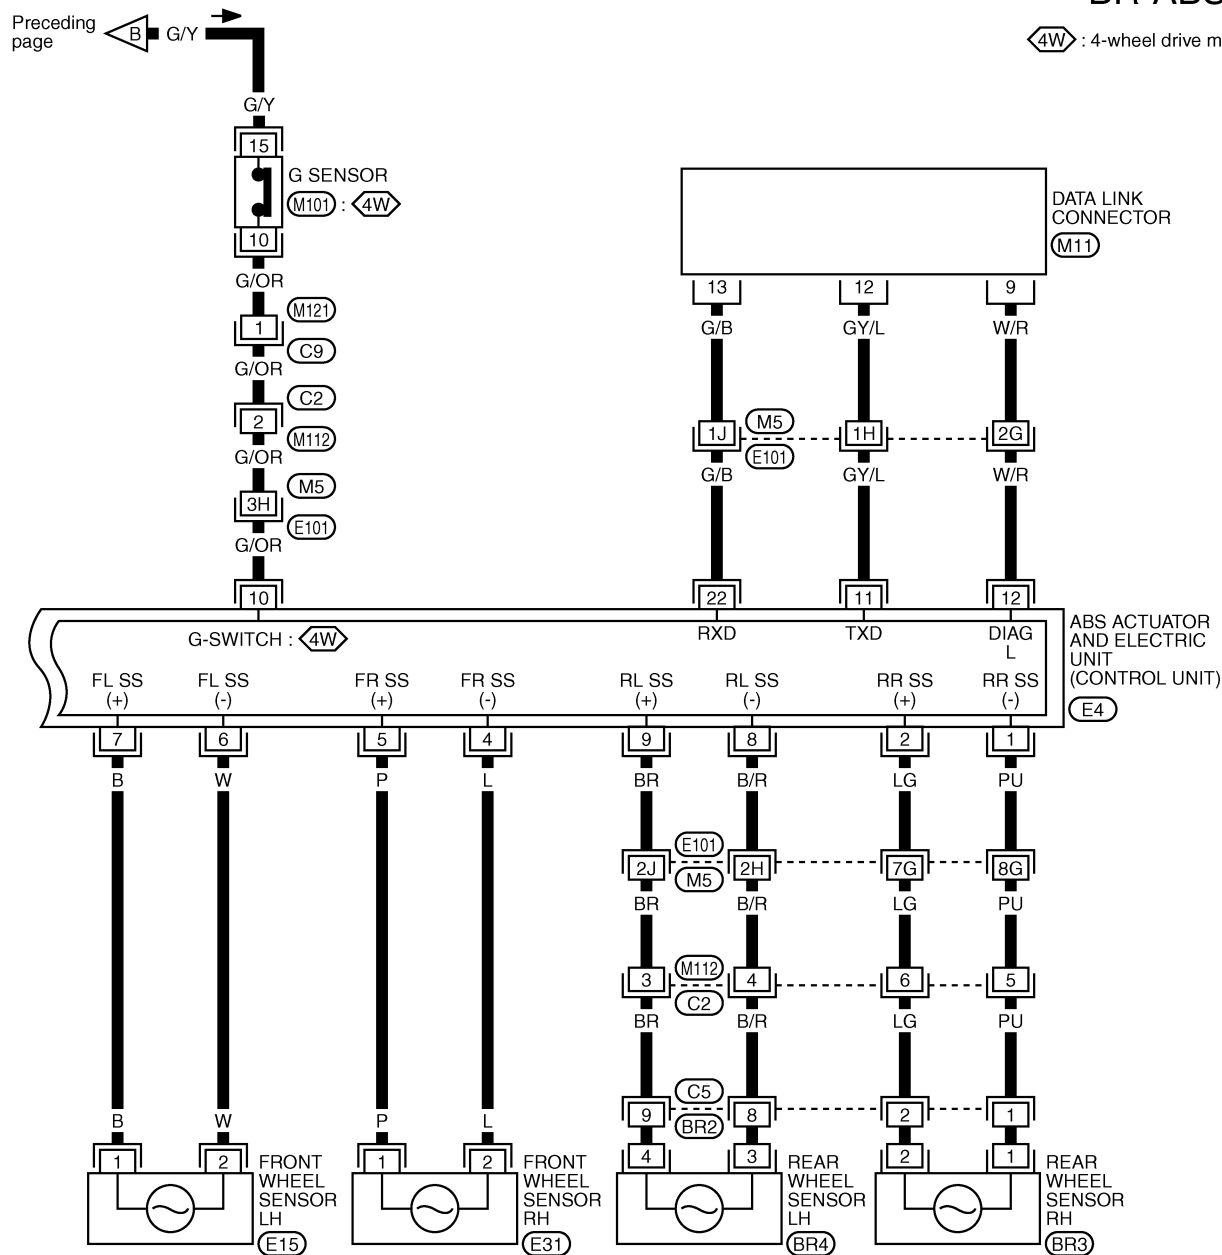

Refer to last page (Foldout page).

M5, E101

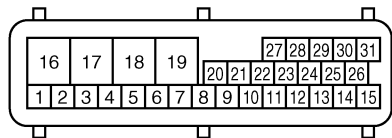

*: This connector is not shown in "HARNESS LAYOUT", EL section.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

FA

RA

BR

ST

RS

BT

HA

EL

IDX