



SUPER MULTIPLE JUNCTION (SMJ)

Terminal Arrangement

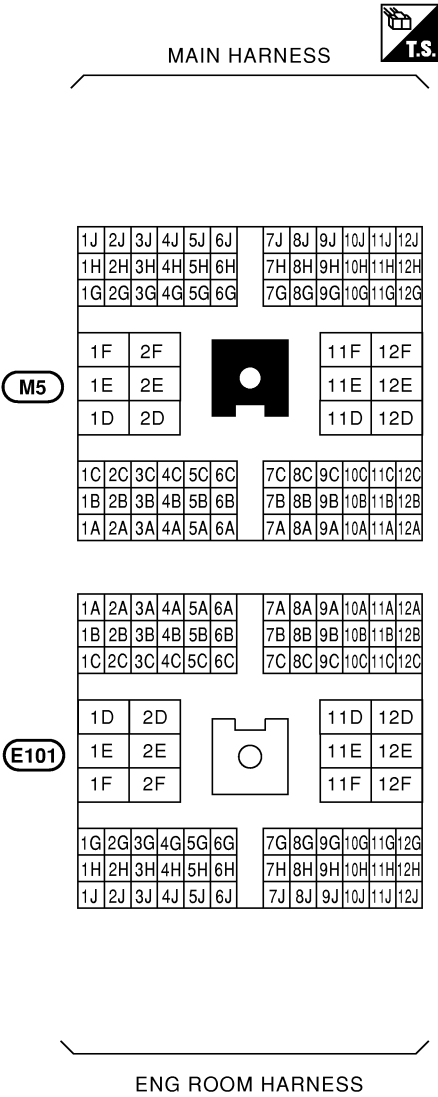


FUSE AND FUSIBLE LINK

Terminal Arrangement

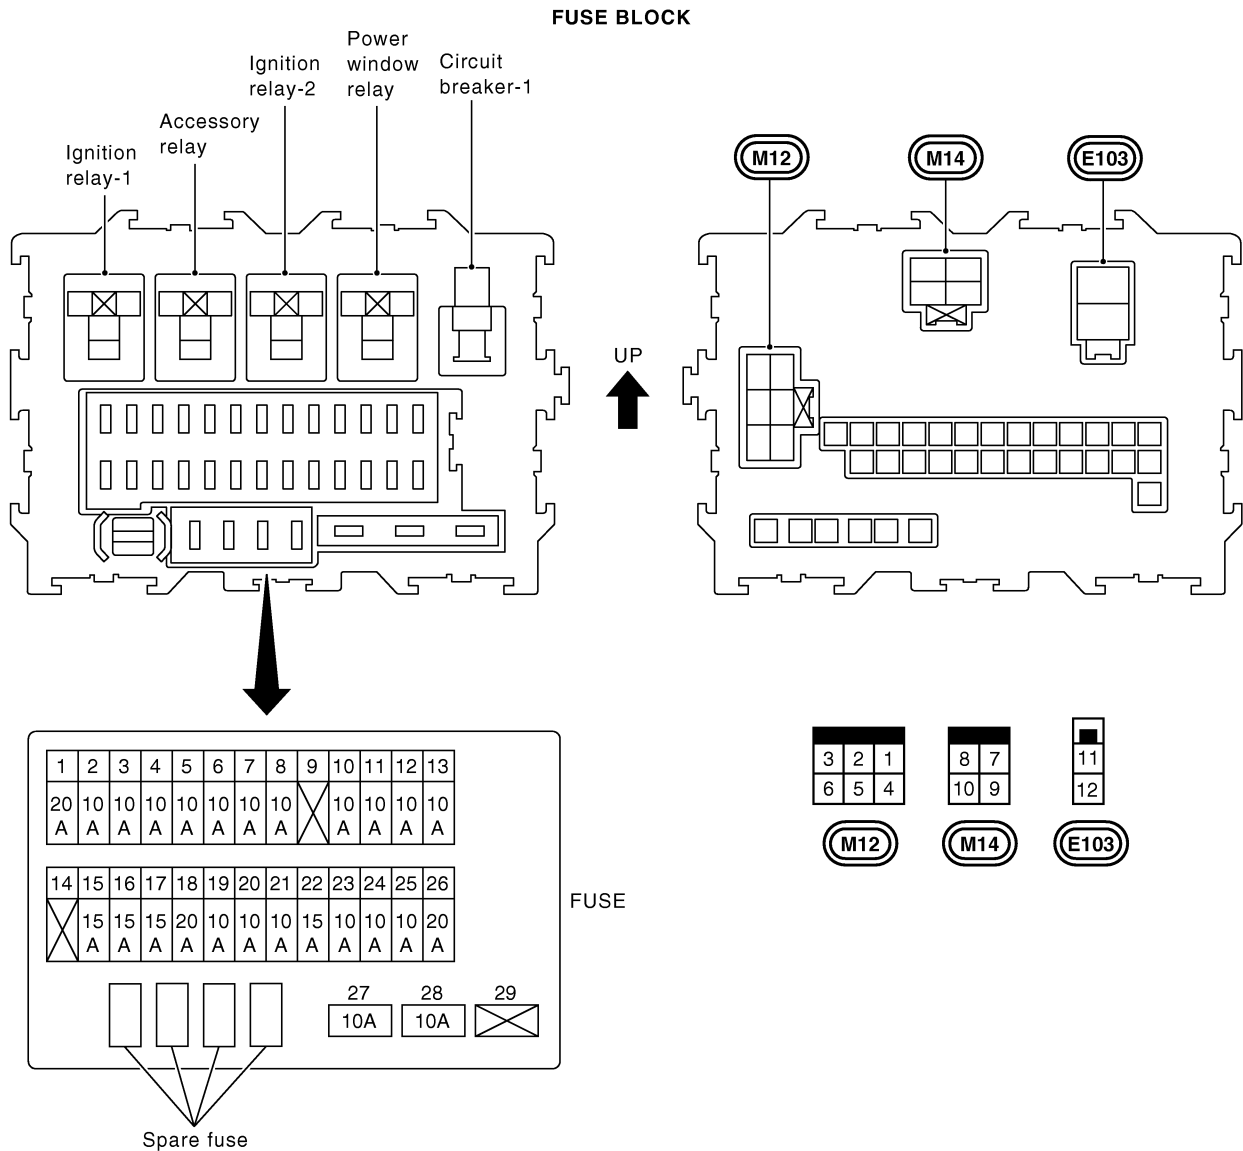

FUSIBLE LINK AND FUSE BOX

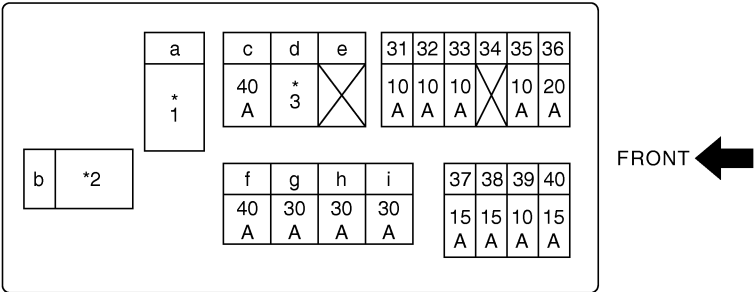

No. 31 - 40: Fuse a - i: Fusible link

- *1: 80A ... With KA, TD, QD and ZD engines
100A ... With YD engine

*2: 60A ... With YD engine
80A ... With TD, QD and ZD engines
- *3: 30A ... Except with YD engine for the Middle East

40A ... With YD engine for the Middle East