


SUPER MULTIPLE JUNCTION (SMJ)



Terminal Arrangement

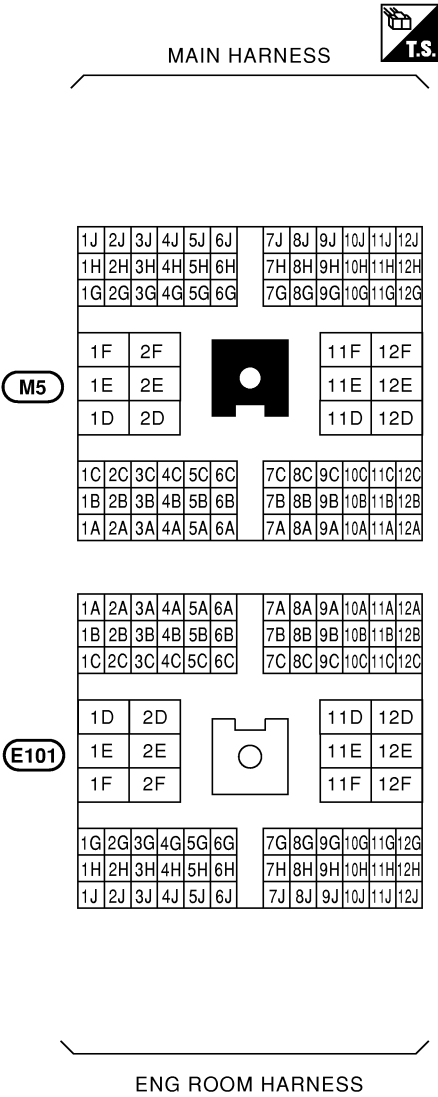

ENG ROOM HARNESS

# FUSE AND FUSIBLE LINK


## Terminal Arrangement

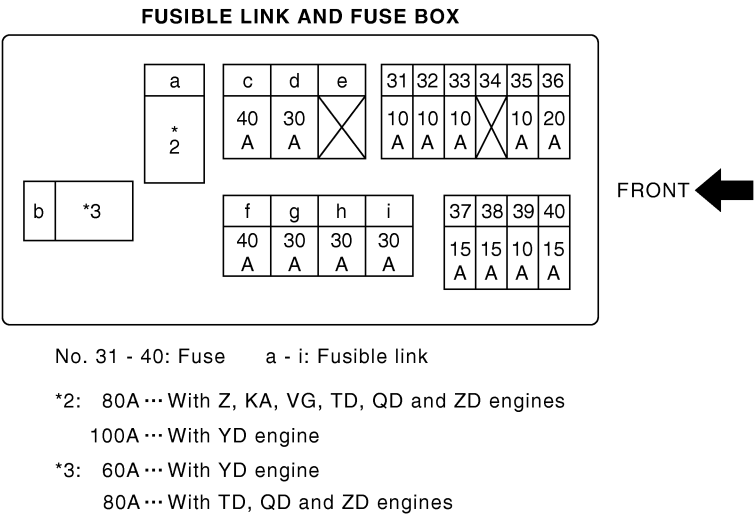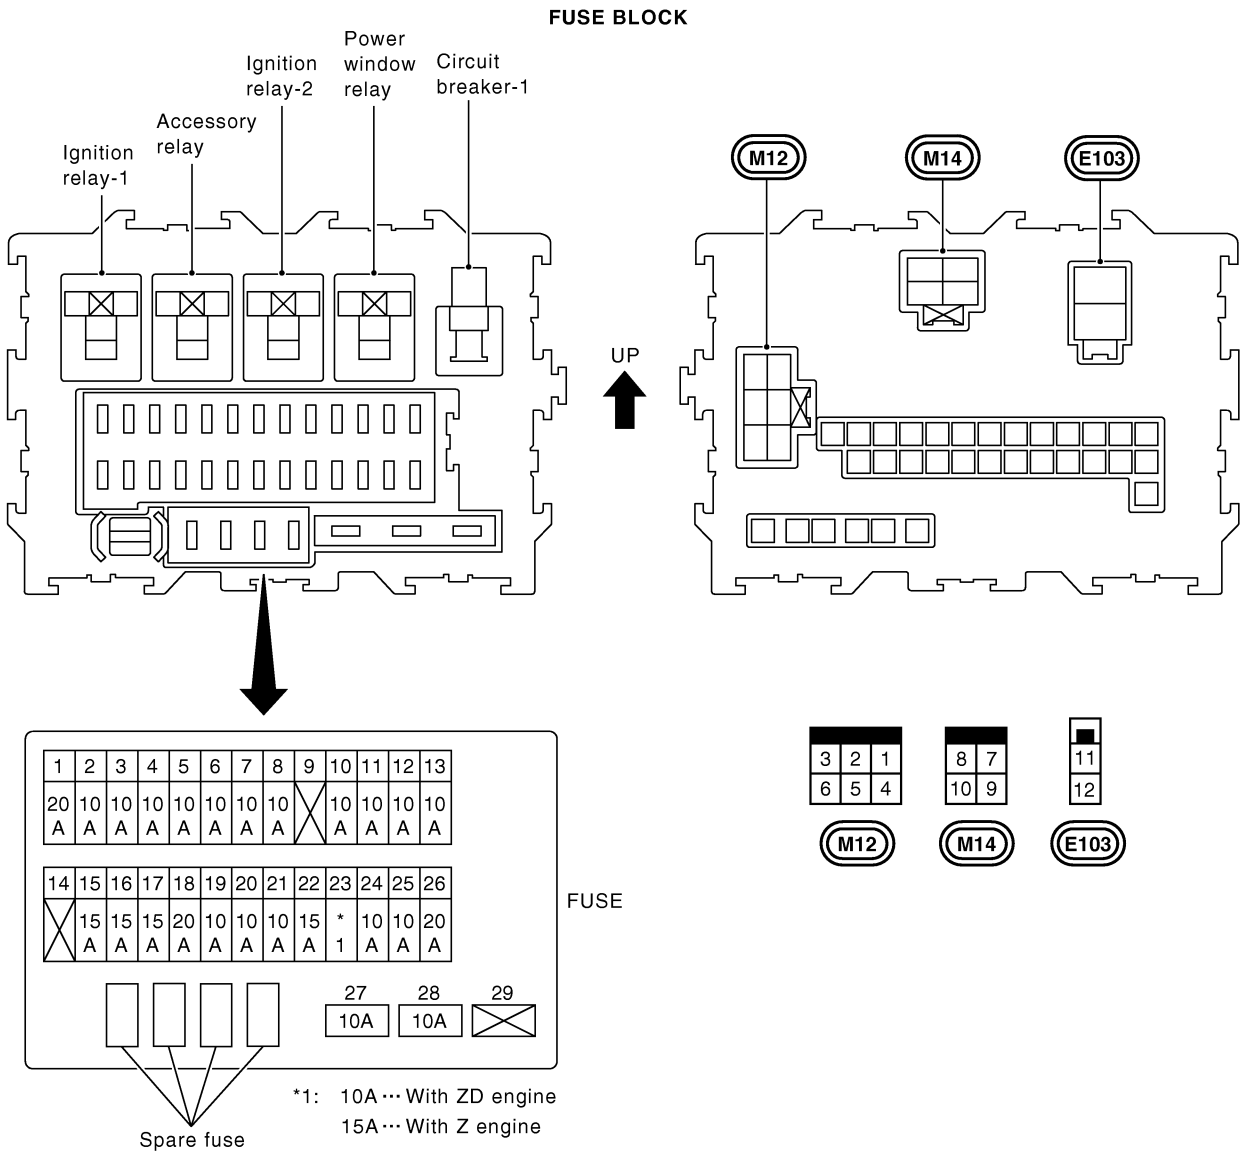


# CONTROL UNITS

## Terminal Arrangement

ECM **(M32)** (LHD models with KA engine for Europe)

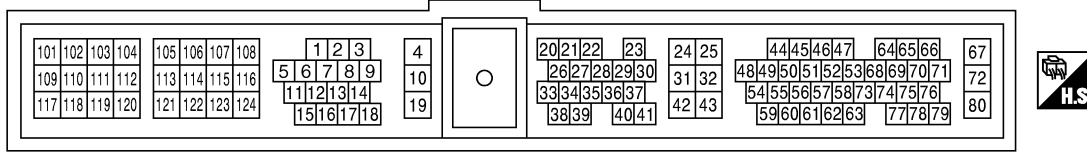


ECM **(F51)** (VG engine)




ECM **(M32)** (LHD models with YD and ZD engines),

**(F51)** (RHD models with YD and ZD engines)

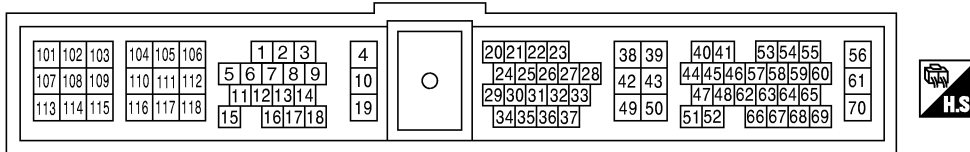


ECM **(M32)** (LHD models with KA engine except for Europe), **(F51)** (RHD models with KA engine)

TCM (Transmission control module) **(M69)** (A/T models with VG engine and QD engine)




TCM (Transmission control module) (A/T models with KA engine)

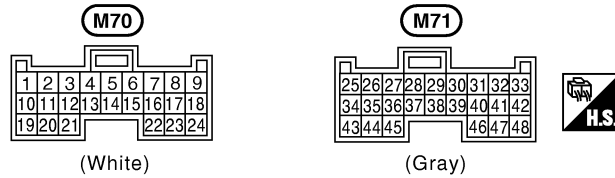


(White)

(Gray)

ABS actuator assembly **(E4)**

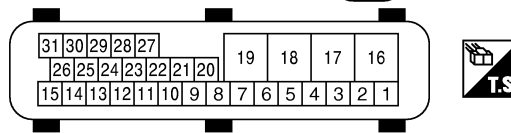


AUTO A/C CONTROL UNIT

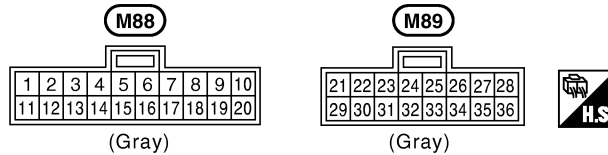

(Gray)

(Gray)

SMART ENTRANCE CONTROL UNIT **(M62)**



(White)